

H.265 IP CAMERA

Quick Installation Guide (IR Outdoor Bullet Camera)

The quick guide is subject to change without notice
Part Number: 00125525921_190116

REMARK: External power supply cannot be used with POE simultaneously, or it will damage the camera.

When this camera is installed near wireless communication devices that emit strong electromagnetic field, irregularity such as noise may appear in the image.

1. OPEN-CASE INSPECTION

1.1 Check step


When user receives IP camera, please check the equipment appearance without obvious damage. Product package is using protective material to deal with most accidental impact in the transport process.

Please open the product outer packing, and check accessories are complete. See List 1 accessories list as below for inspection.



Name	Quantity
IP camera	1
Quick installation guide	1
Accessory pack	1

2. PRODUCT STRUCTURE

2.1 Cable function

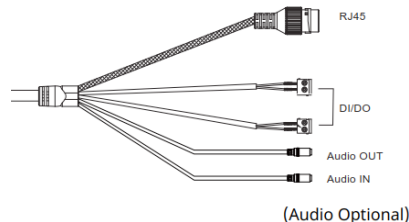


2.2 Dimensions

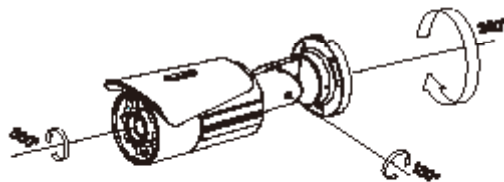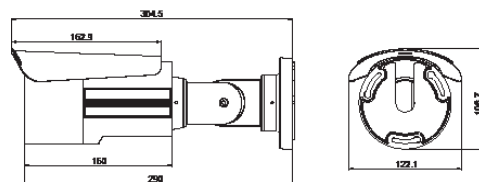


3. EQUIPMENT INSTALLATION


Step 1: Put installation sticker and punch holes on the surface (wall or ceiling) where it needs to be installed.

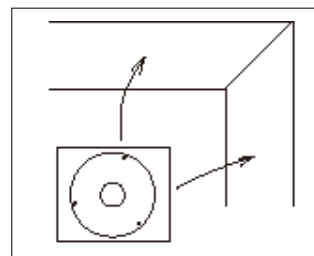


Step 2: Put expansion bolts into the holes to fix bullet on the surface (wall or ceiling).

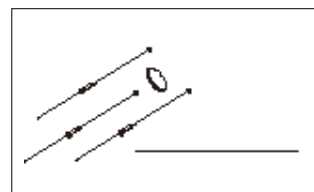


Step 3: Put screws and let screws to be exposed over 5mm.

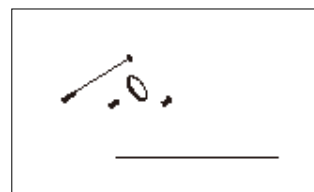


Step 4: Hang on camera and rotate 35° to lock on the surface (wall or ceiling). Please also loose hexhead screws and make sure the camera body can be rotated 180°.

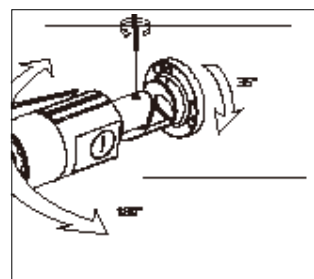

Step 5: Fix the bracket on the surface (wall or ceiling).

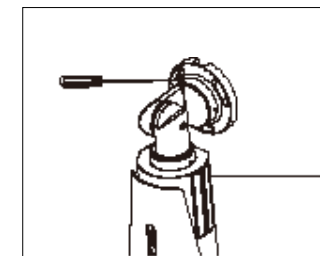


Step 6: Adjust the direction of camera and lock hexhead screws to fix the camera.

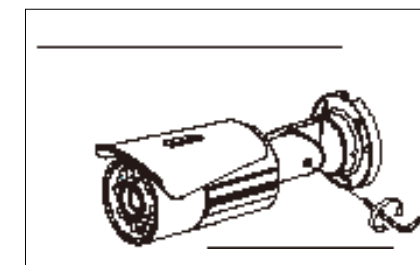

How to remove or insert SD Card on the camera

Please put SD card (if necessary) into the camera before installing on the surface (wall or ceiling). The steps are as below:

- q ⇒ w Remove the cover
- e Insert SD card into SD card slot
- r Put the cover back into the camera

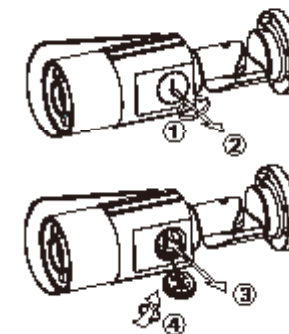

! If you open the cover to replace SD Card, you must replace a new desiccant bag and put it into the camera. Please contact your local distributor to purchase the proper new desiccant bag.


PRECAUTIONS

- Do not use the camera in extreme temperature conditions.
Please use the camera within -20°C to 50°C
Air vent is required at high temperature
- Do not use or store the camera in humid environment
It may cause poor image quality.
- Do not use the camera in unstable lighting conditions.
Inconsistent lighting or flickering may cause poor image.
- Never use the camera close to gas or oil leak.
It may not operate properly.
- Do not disassemble the camera.
There is no user serviceable part inside.
- Do not drop the camera or apply force on it.
It may cause a malfunction.
- Never face the camera to strong light for long periods of time.
It may damage the CMOS sensor.

How to replace a new desiccant bag on the camera


Step 1: Take off sunshield and twist front lid to open:

q ⇒ w ⇒ e ⇒ r

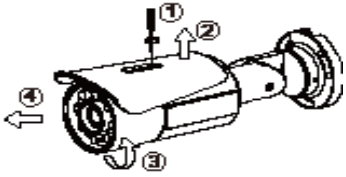

Step 2: Place a new desiccant bag into the inside housing

(t)

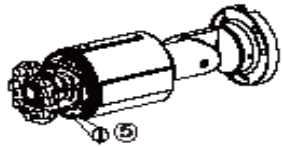


Step 3: Twist back the front lid and put sunshield back

4. NETWORK OPERATION


4.1 Use correct power supply and need PC OS Windows 7.

4.2 After startup, connect the device with switch or router, see below picture.

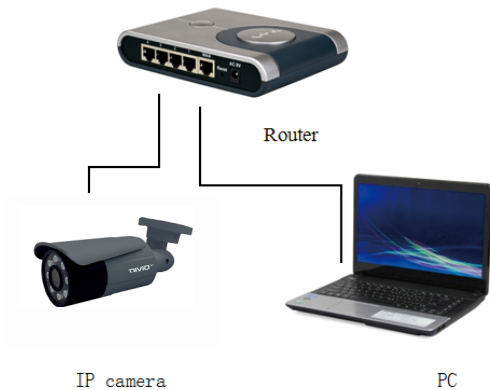


4.3 Go to install CAM Finder and you can find your camera.

Please get CAM Finder software from sales.

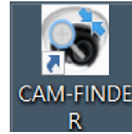

4.4 Run IP Finder, Click "Search", you will find the device IP, make sure default IP address is 192.168.0.250, and see as below picture.

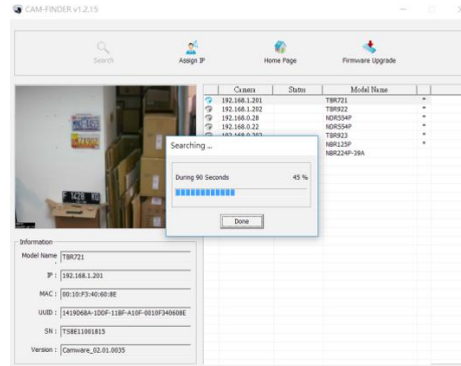

4.5 Default IP setting:

IP address: 192.168.0.250
 Subnet Mask: 255.255.255.0
 User name: Admin
 Password: 1234

4.6 Open IE Browser, type 192.168.0.250 (default IP address) in the address bar, and then press the Enter button.

4.7 You will be prompted with a pop-up window asking for login information, type in "Admin" (default login name) and "1234" (default password), see below picture.

Sign in


Your connection to this site is not private

Username

Password


4.8 WEB GUI After login, enter into below user interface

"Live View", and also if you want more setting, you can click the "Setup".

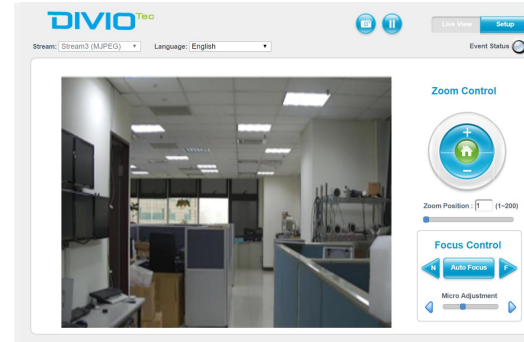

4.9 Network Basic Settings:

Displays the current IP address, Subnet Mask, Default Gateway, DNS, HTTP Port and MAC of the camera, see below picture:

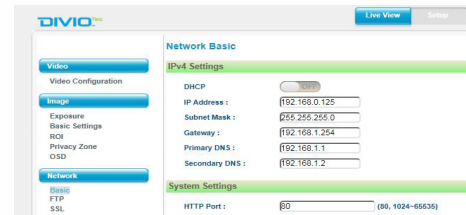

4.10 System Maintenance Settings:

If you need update your camera default, you can choose Restart Camera or Factory Default or Hardware Factory Default, see

