www.diviotec.com

SmartCam TCP Notification Setup

Outline

- Structure
- How to setup Milestone?
- How to setup Camera?
- How to check the Event?

Structure

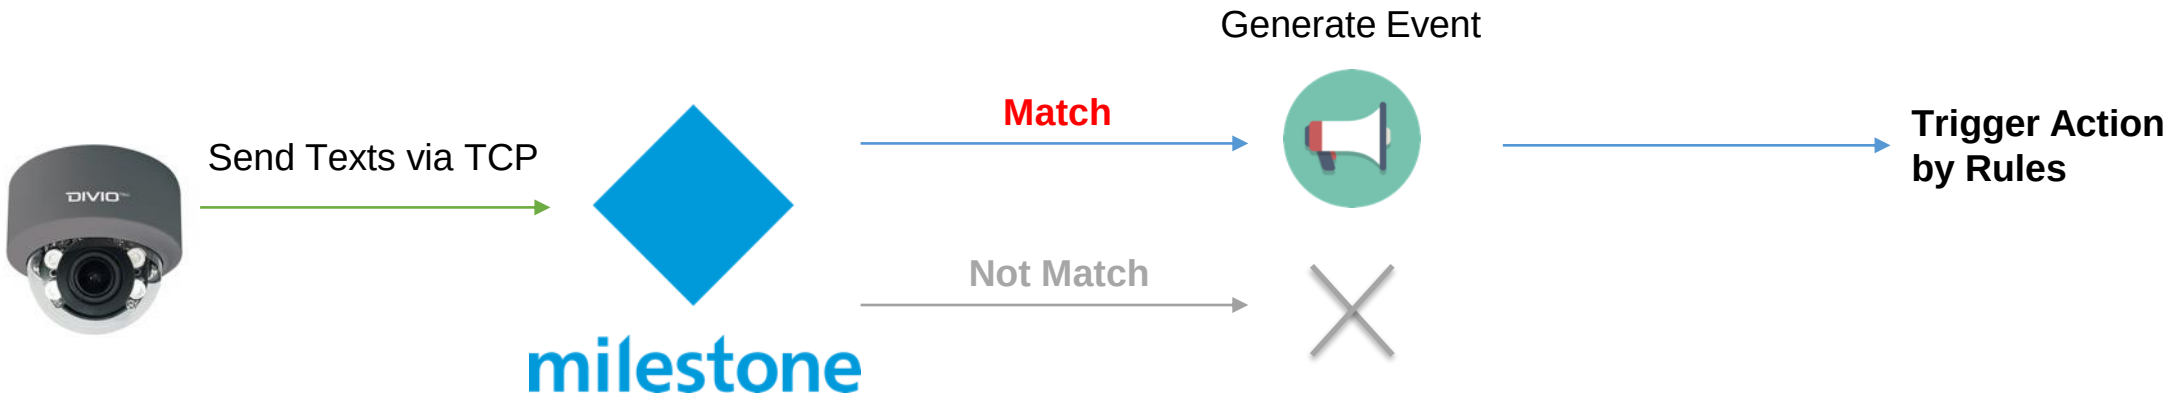
Generate Event
Match
Send Texts via TCP
Trigger Action
by Rules
Not Match
milestone

www.diviotec.com

How to setup Milestone?

Open milestone management

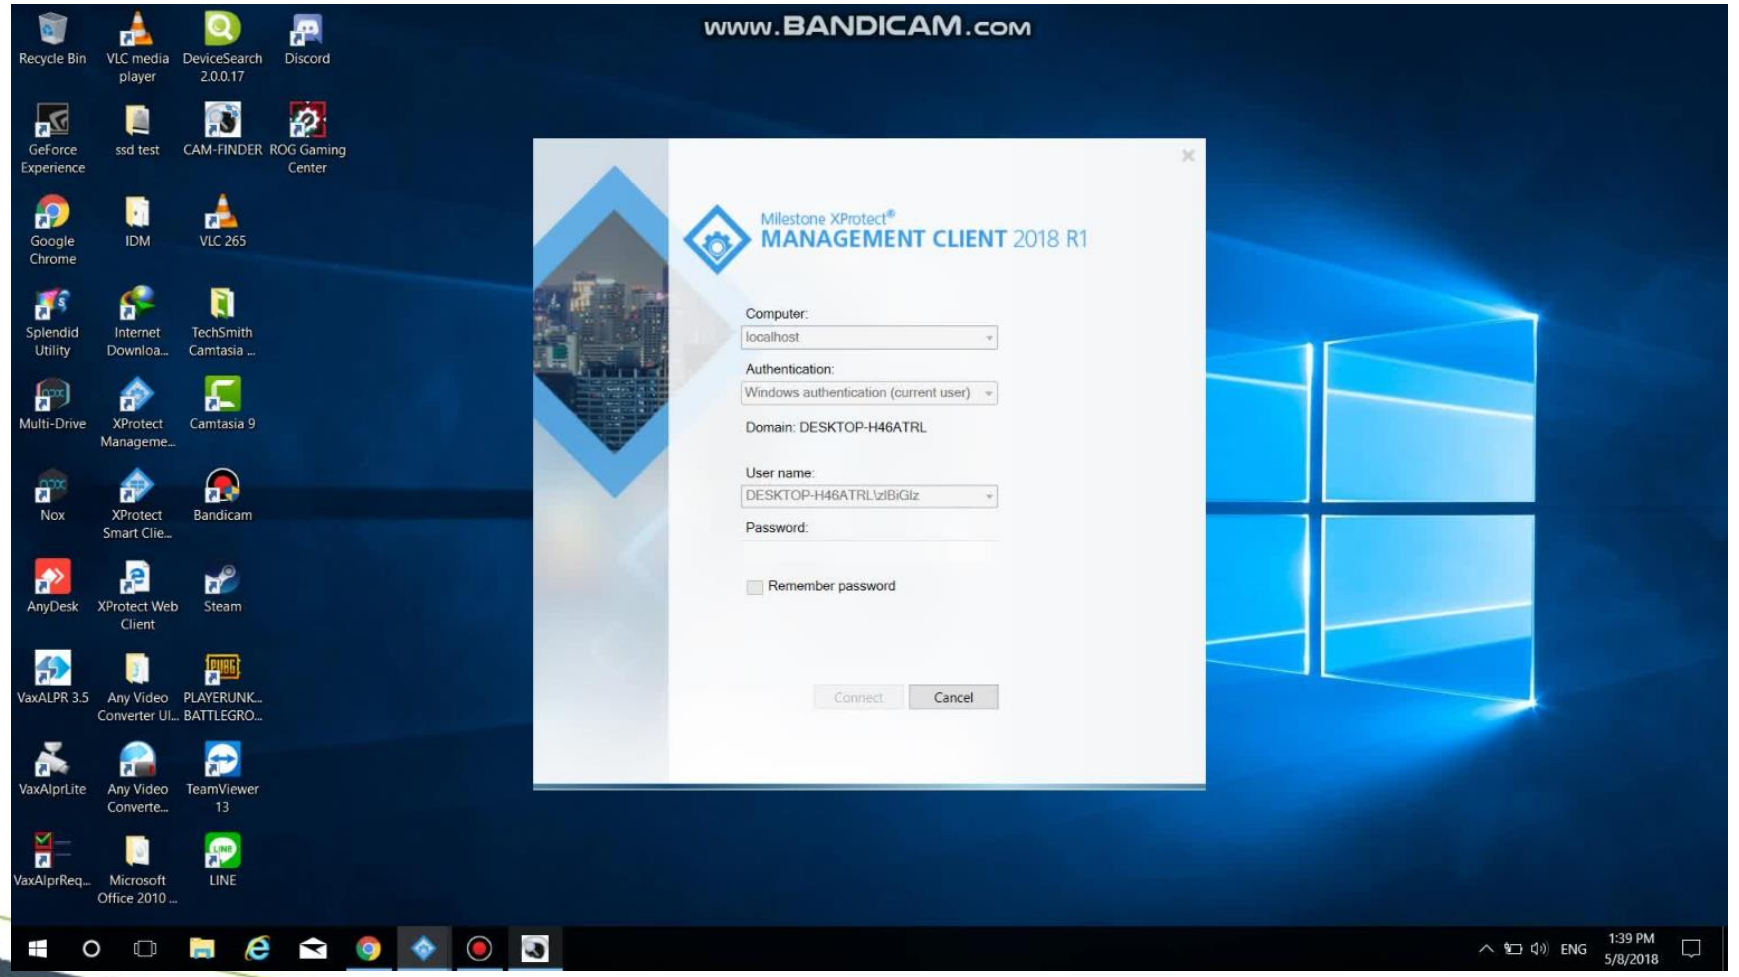

Add the device

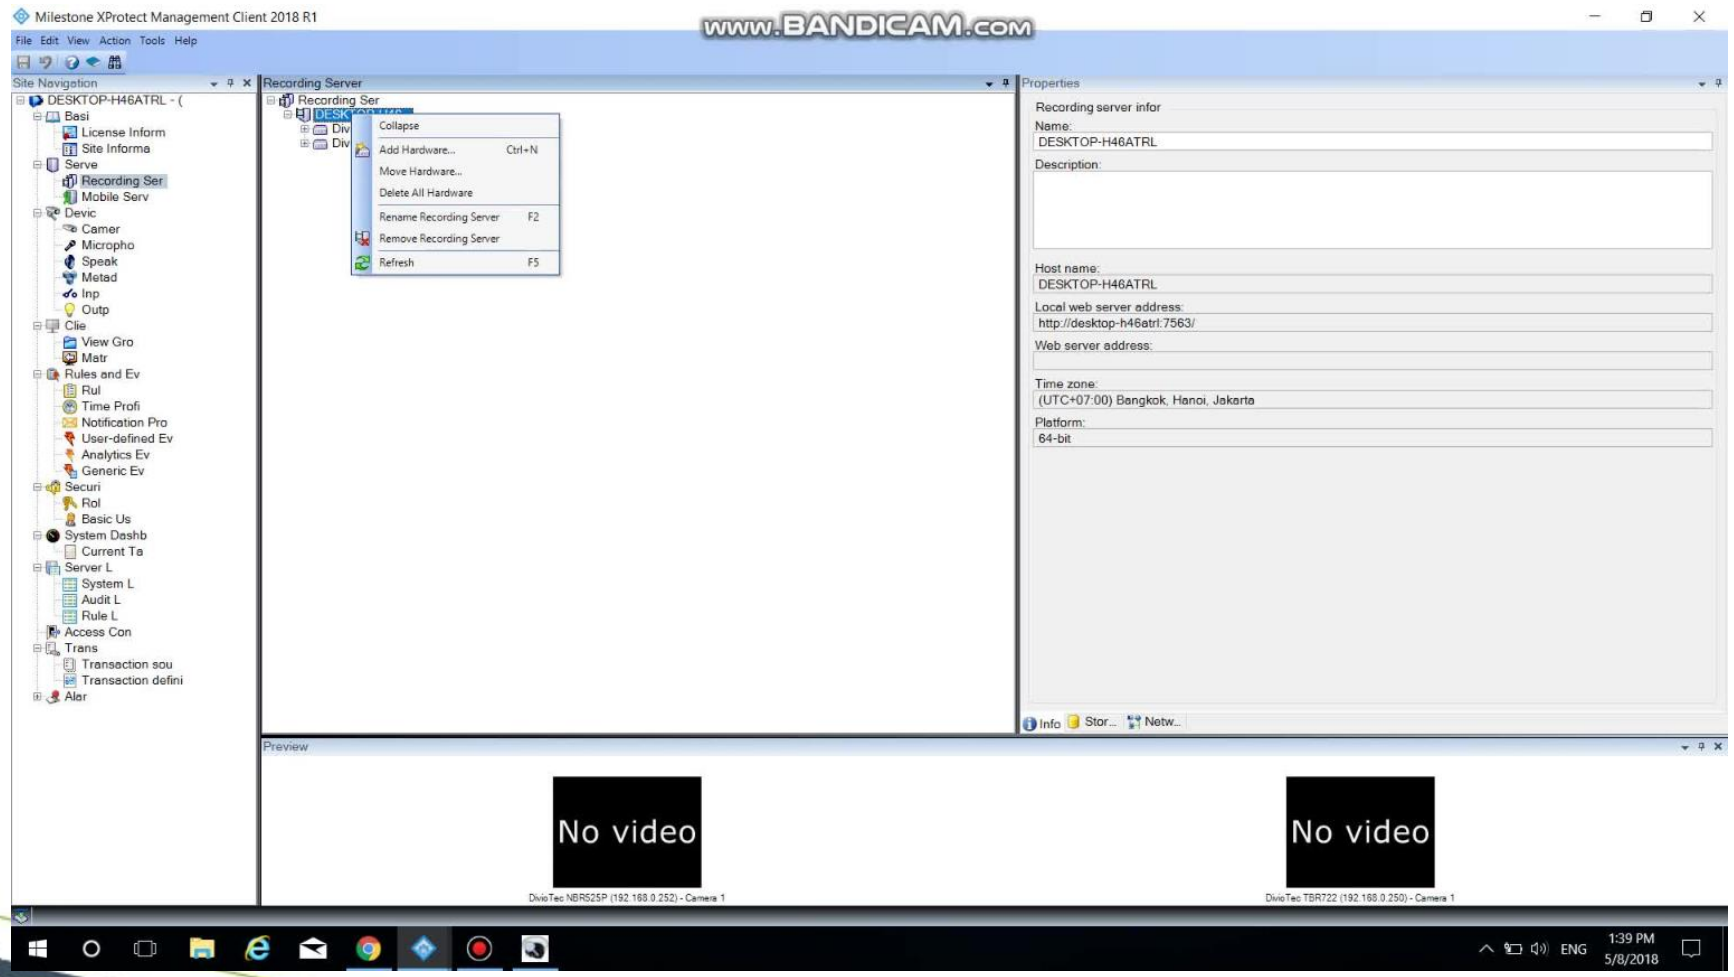

Select add device by Manual

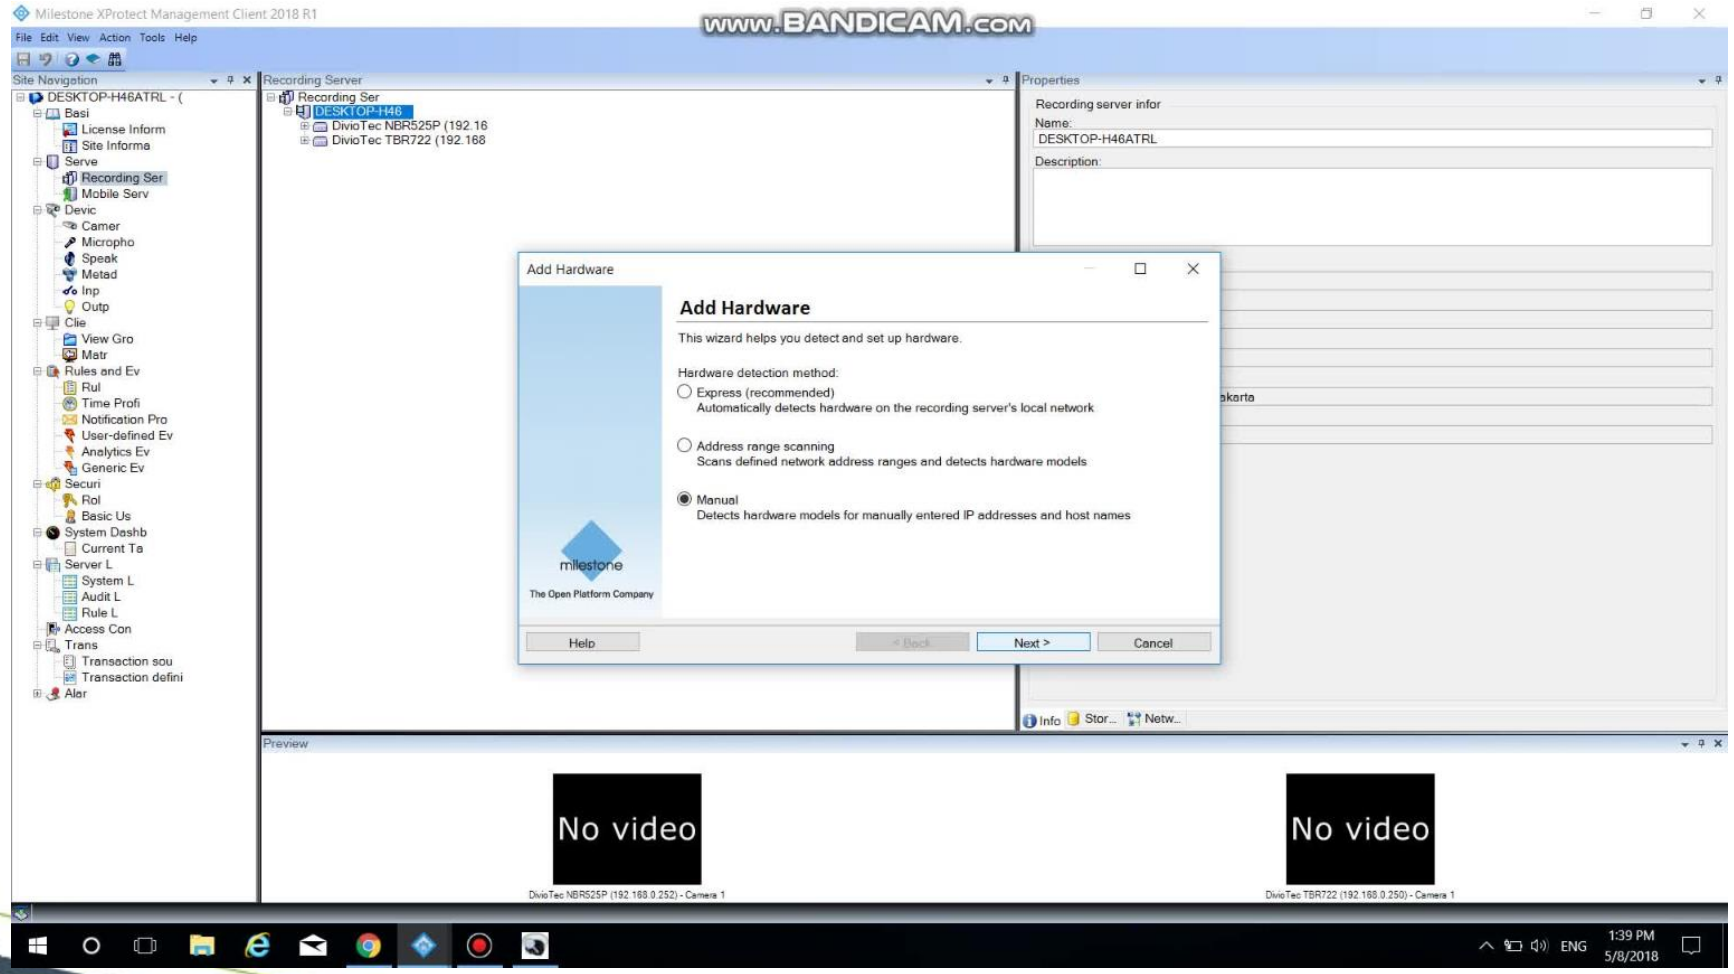

Enter username and password

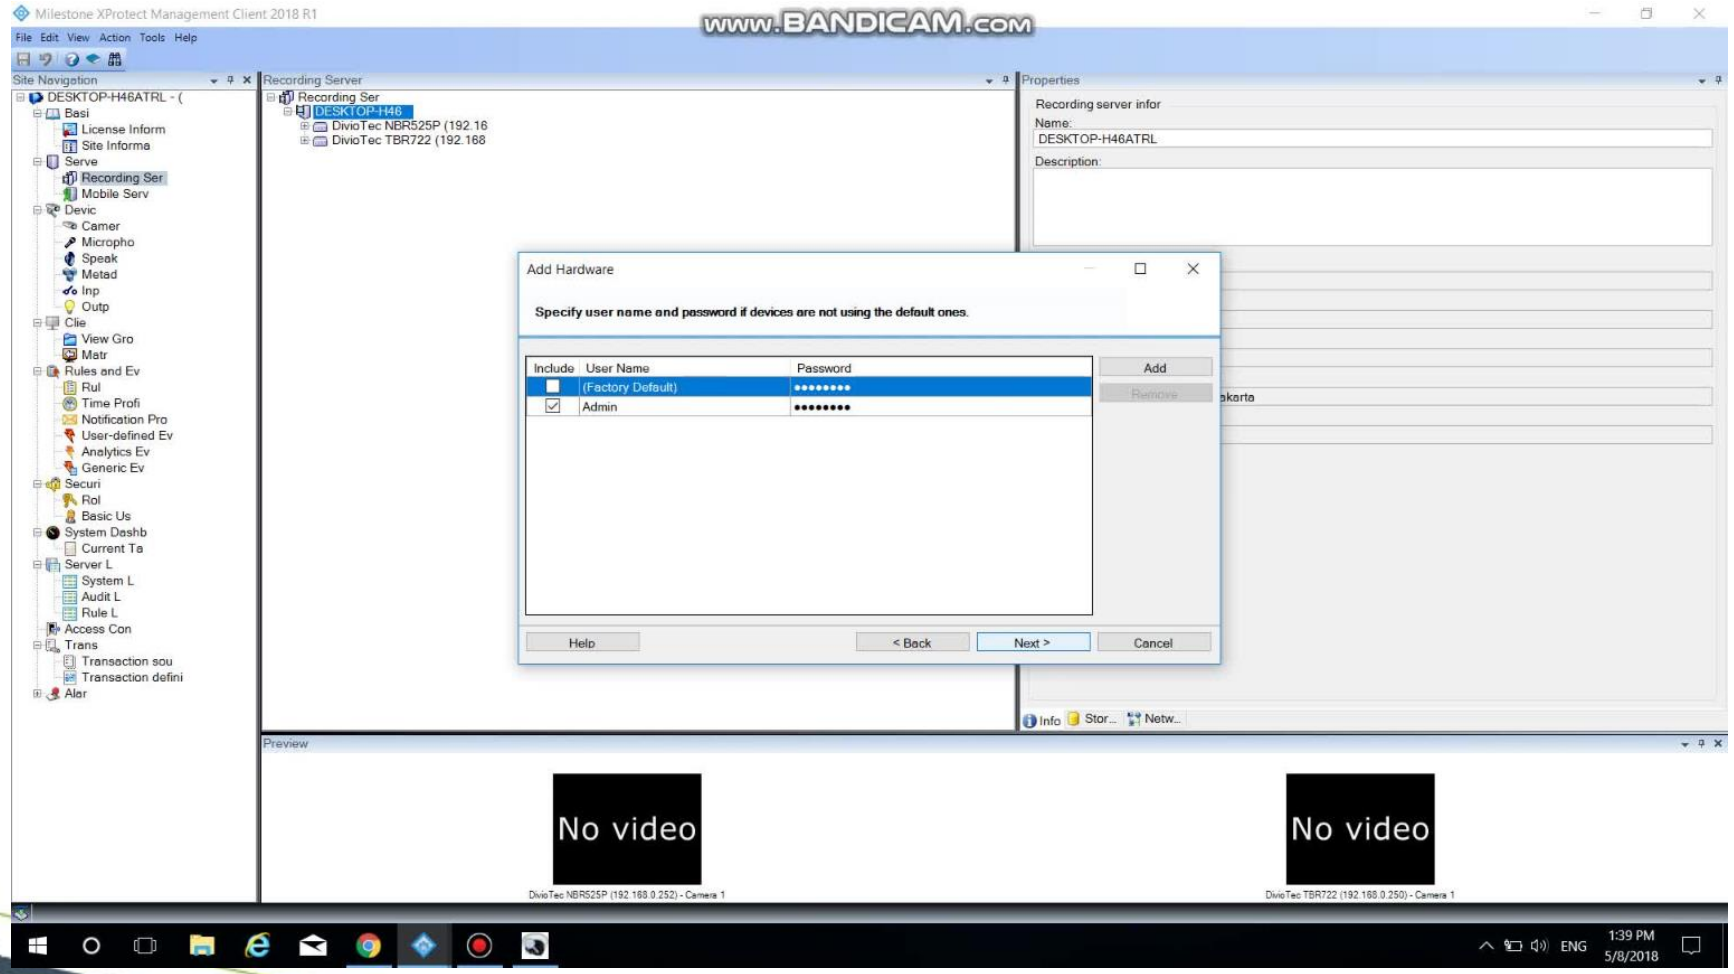

Select Onvif device

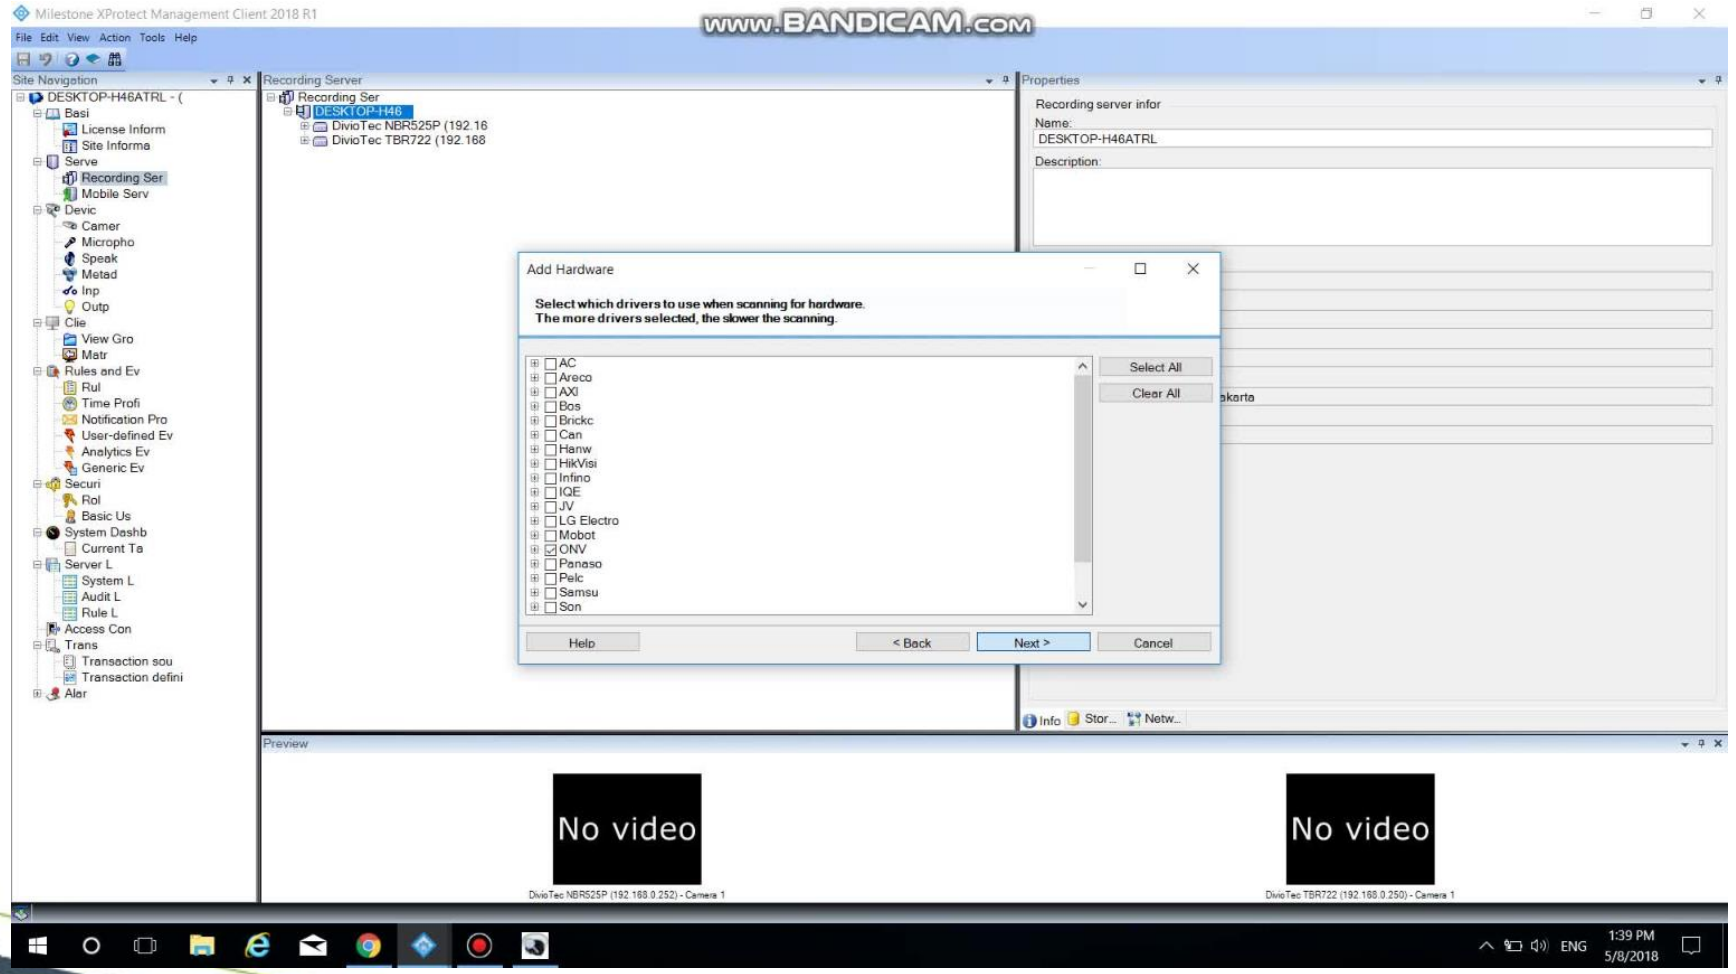

Enter the device IP

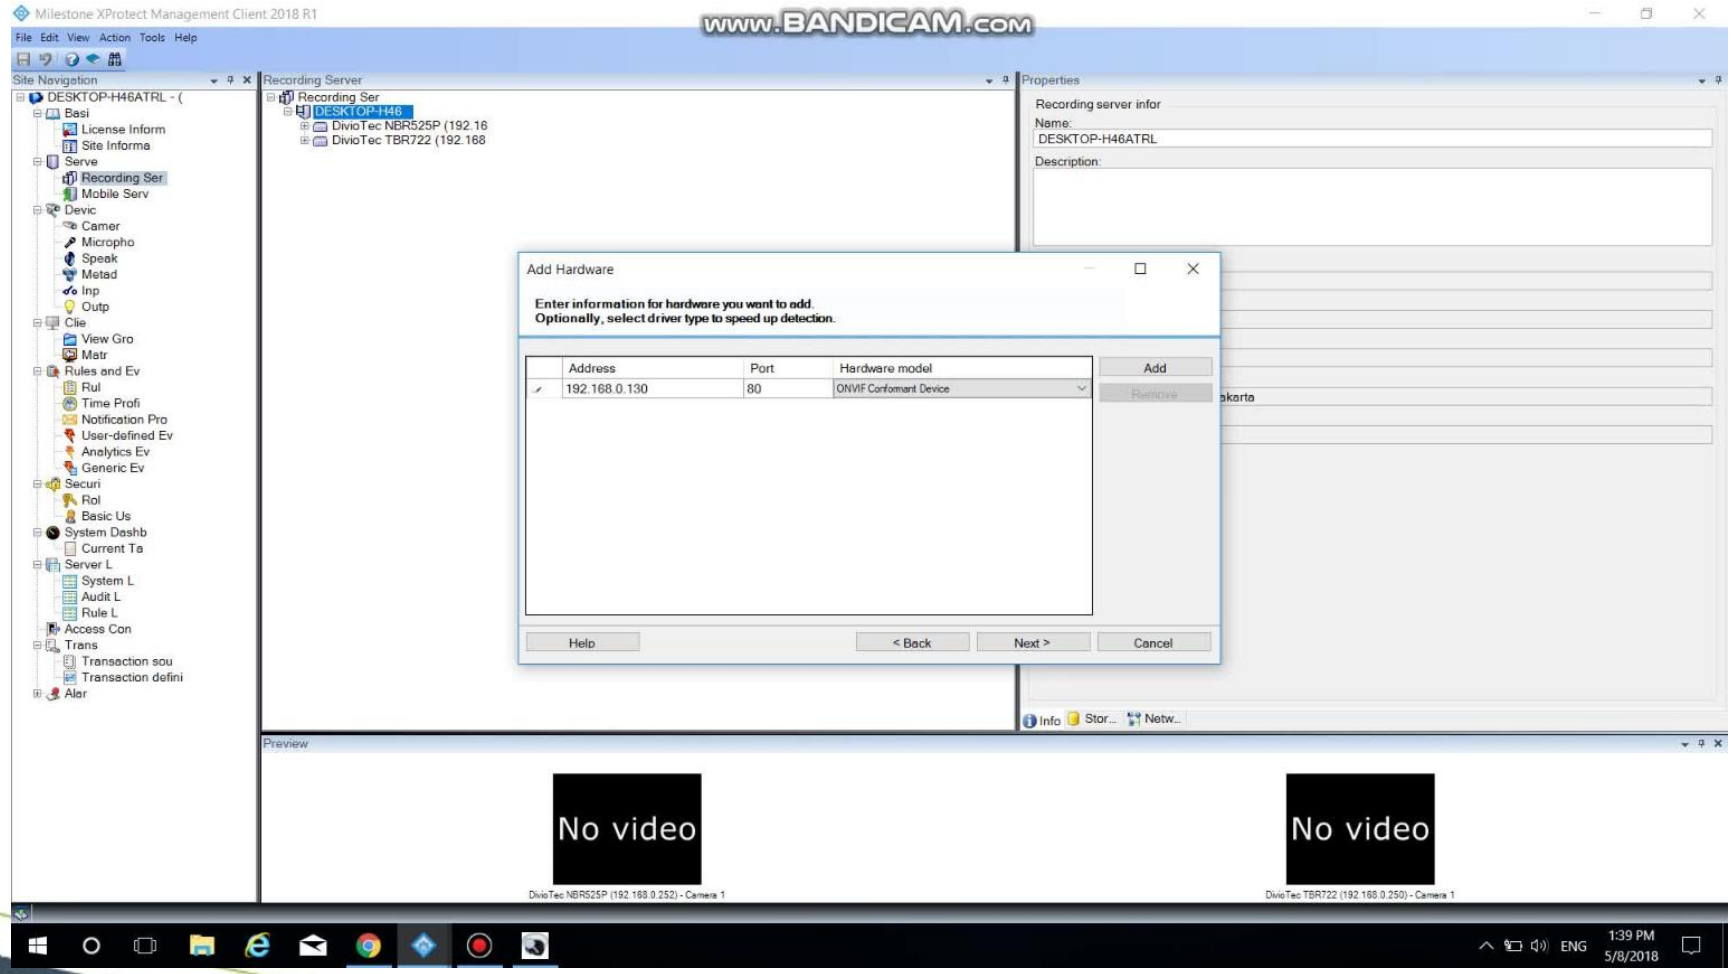

Click Next to search

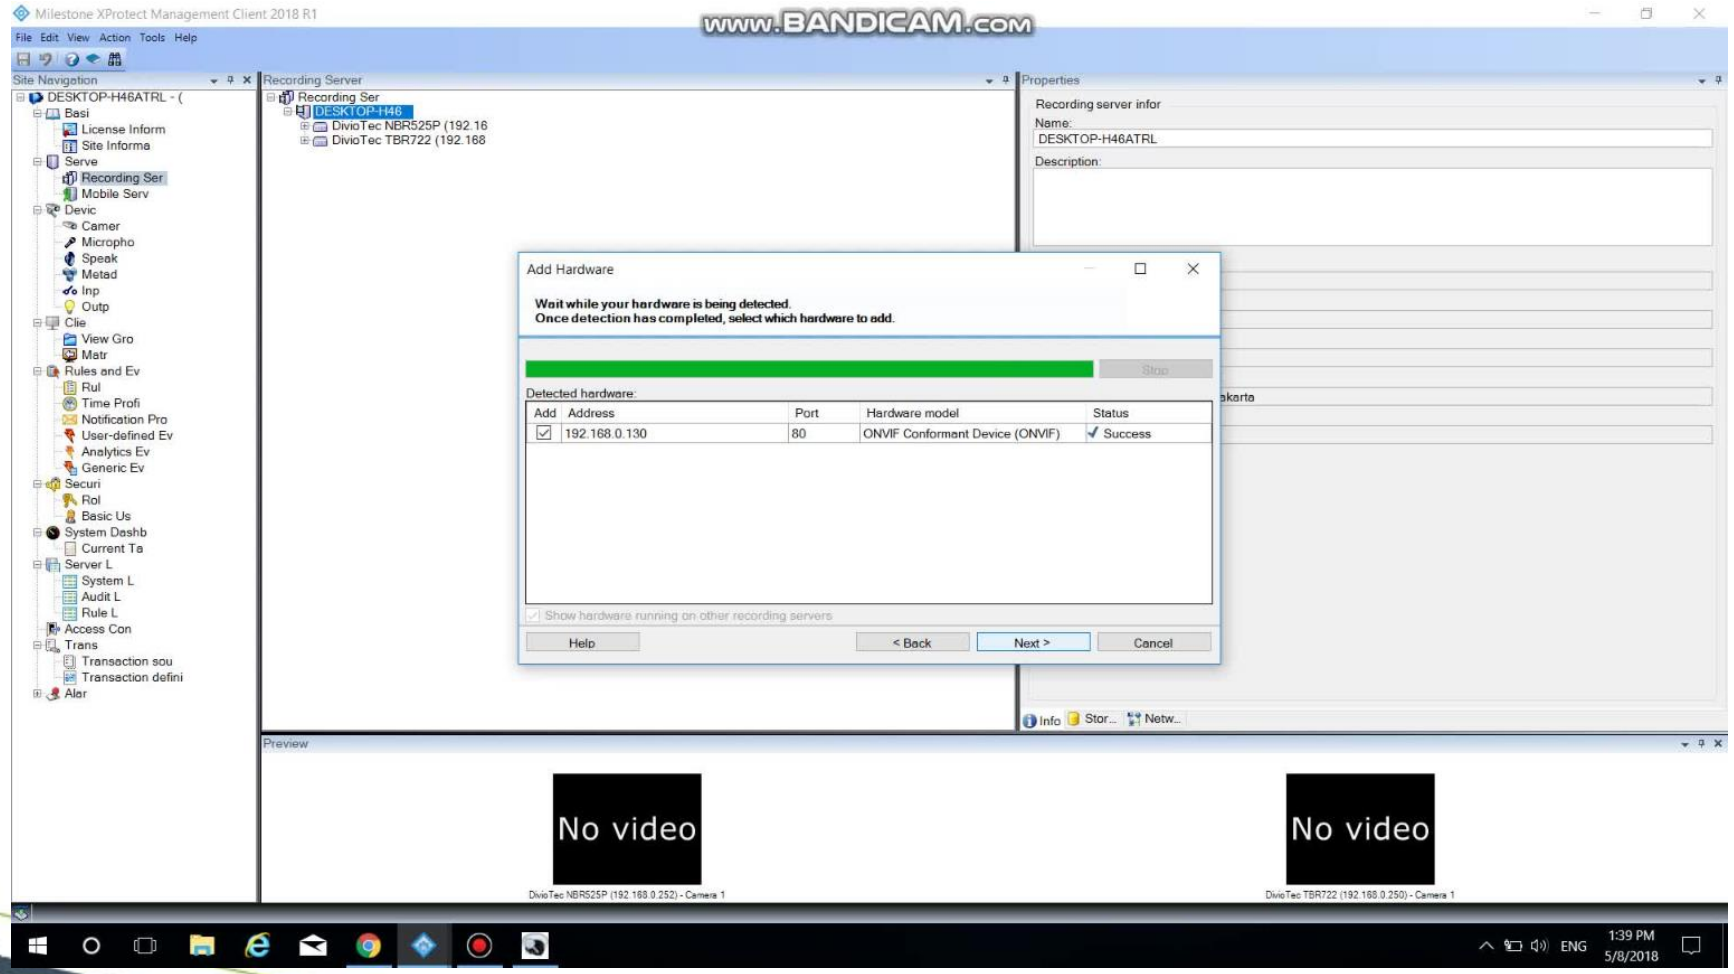

Select a group to add device

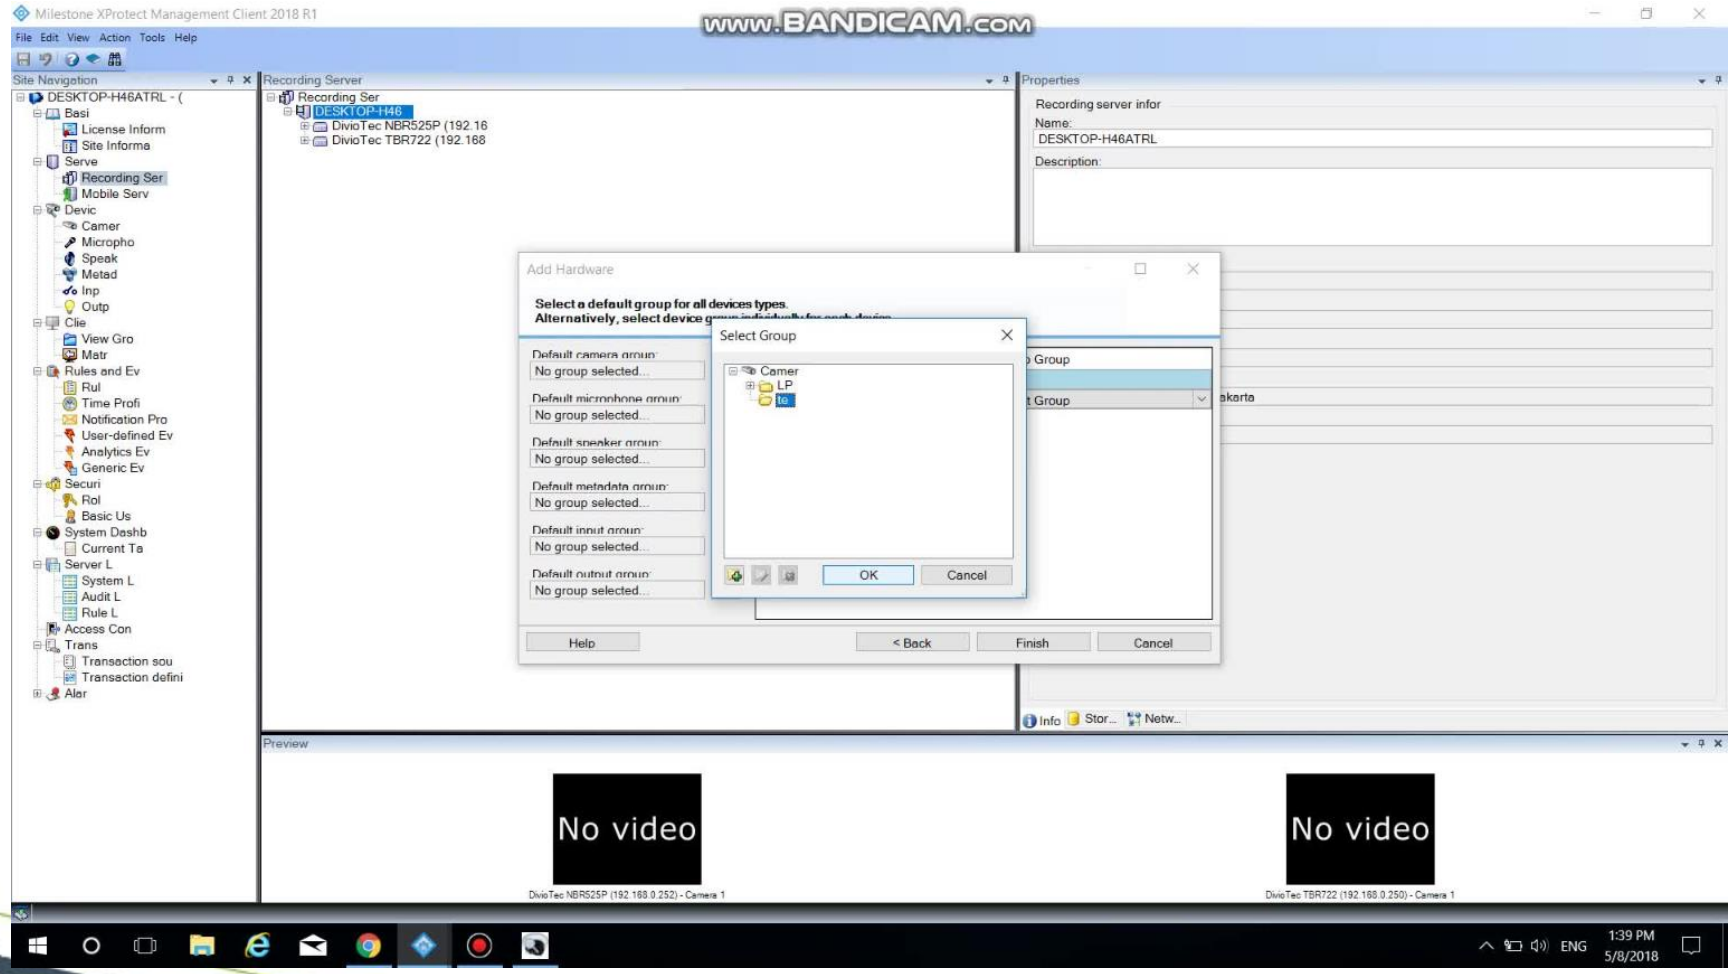

www.diviotec.com

Milestone

Generate Generic Event

Enter the Generic event and add Generic event

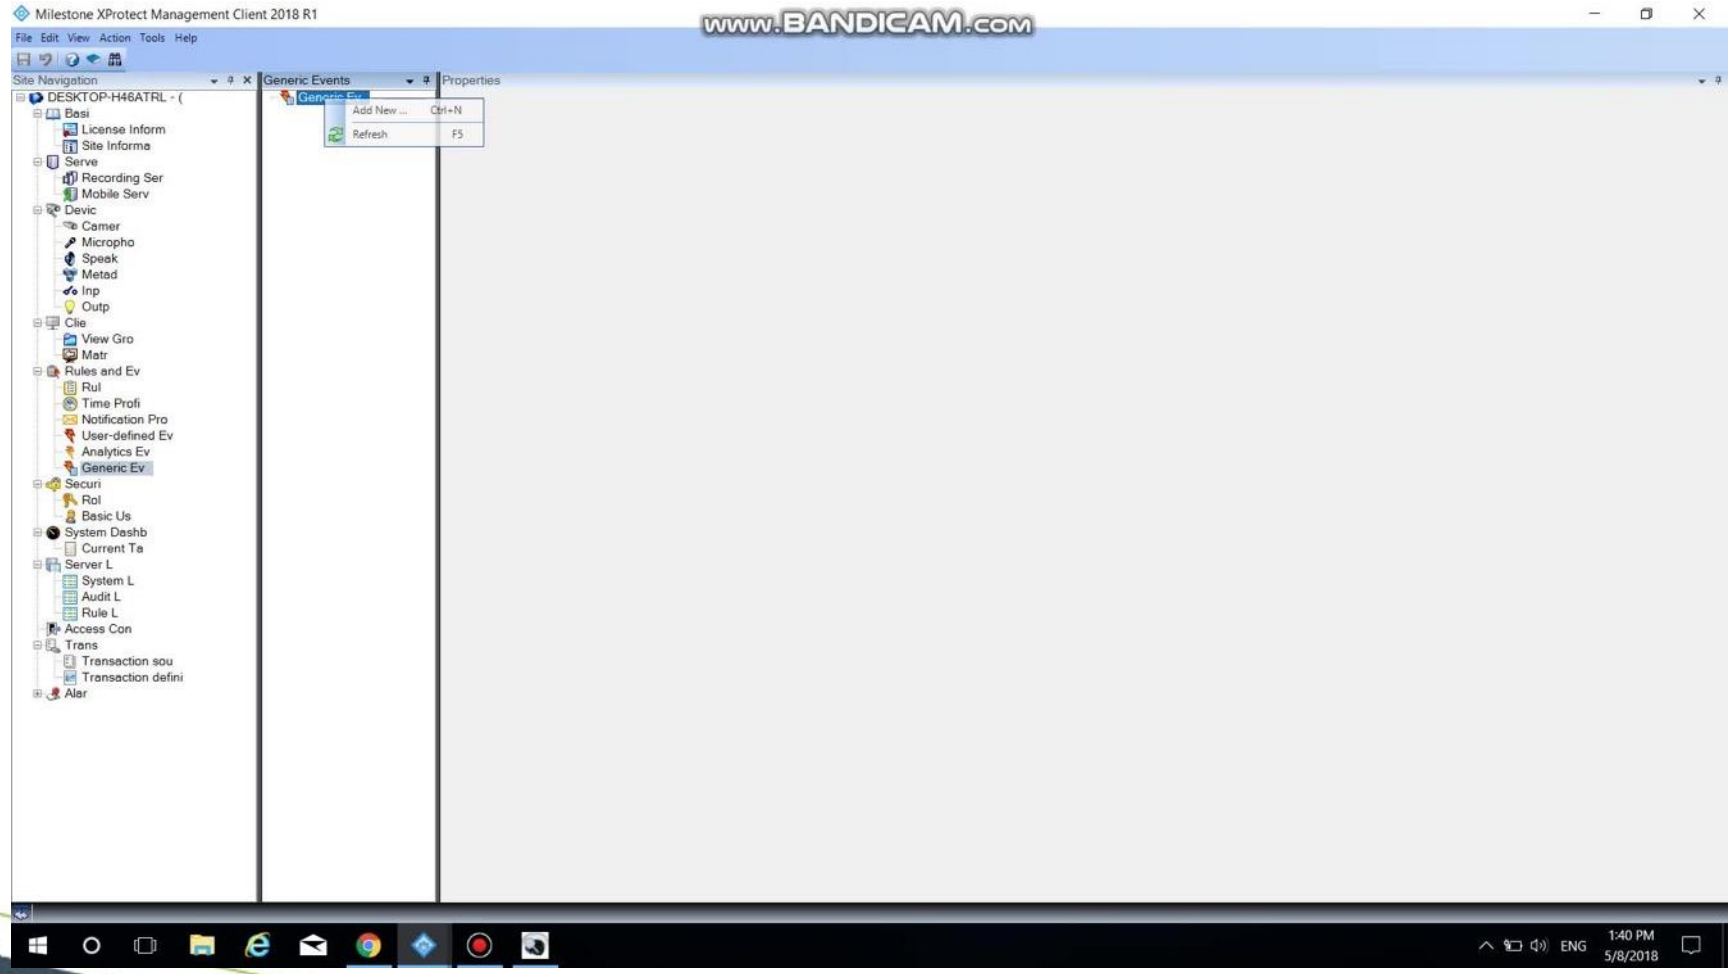

Edit Name Generic Event

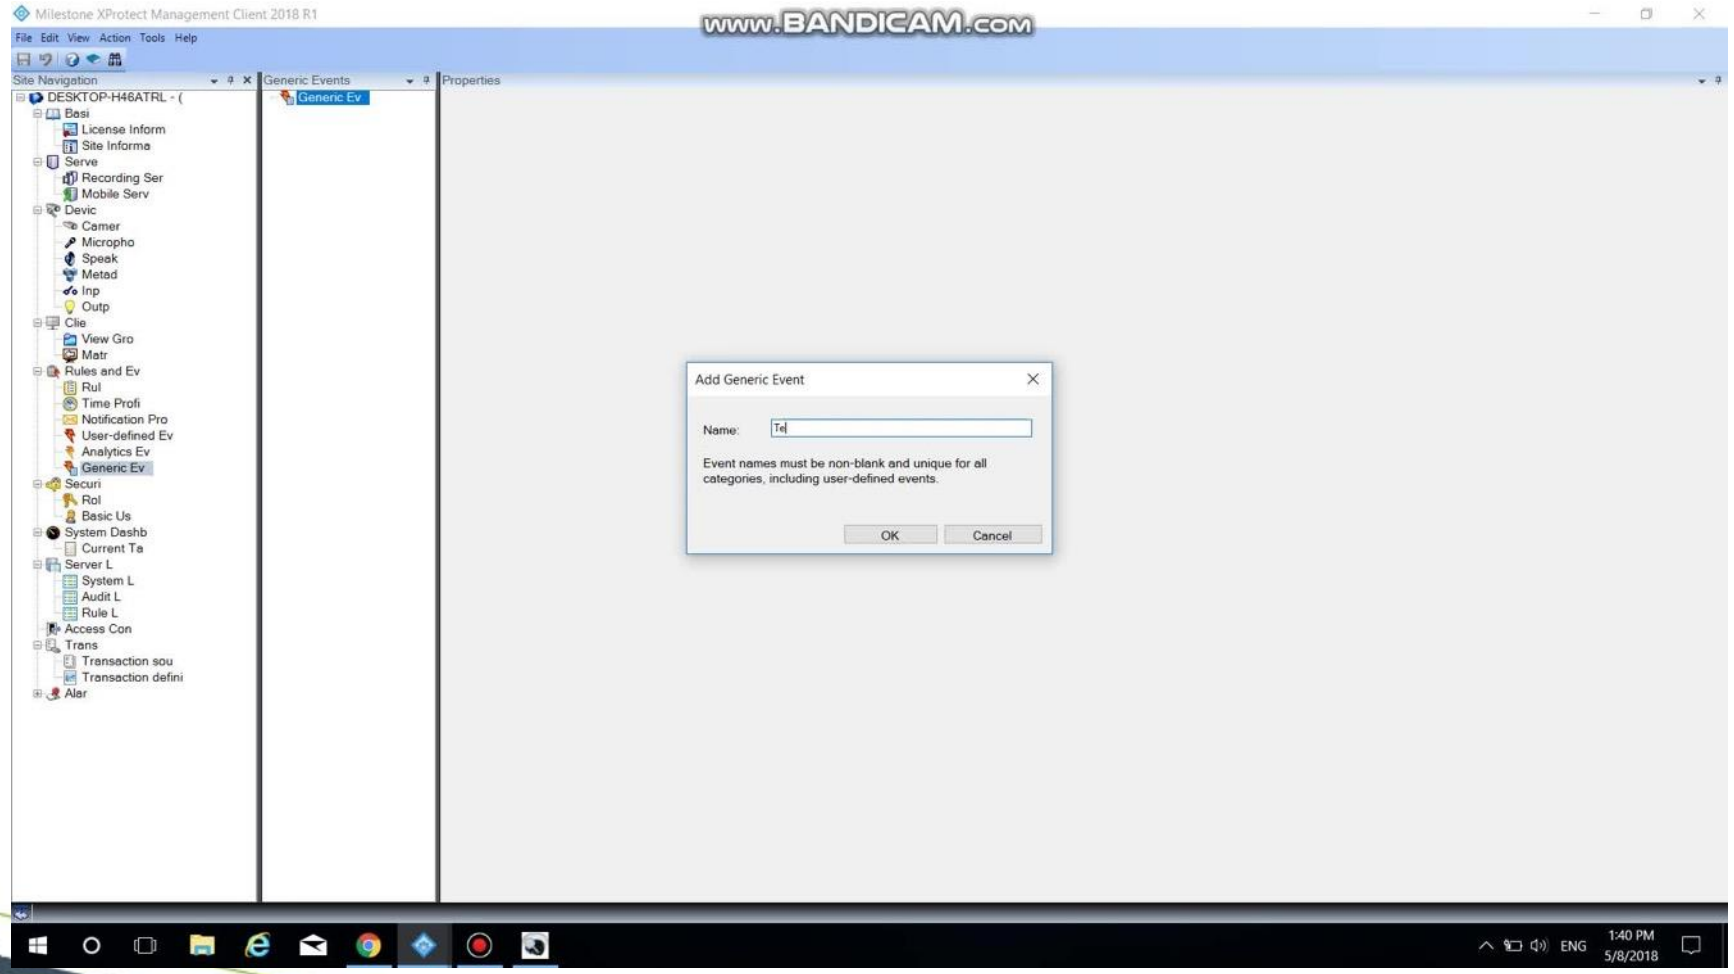

Setup Expression of Generic Event, e.g. ”motion”

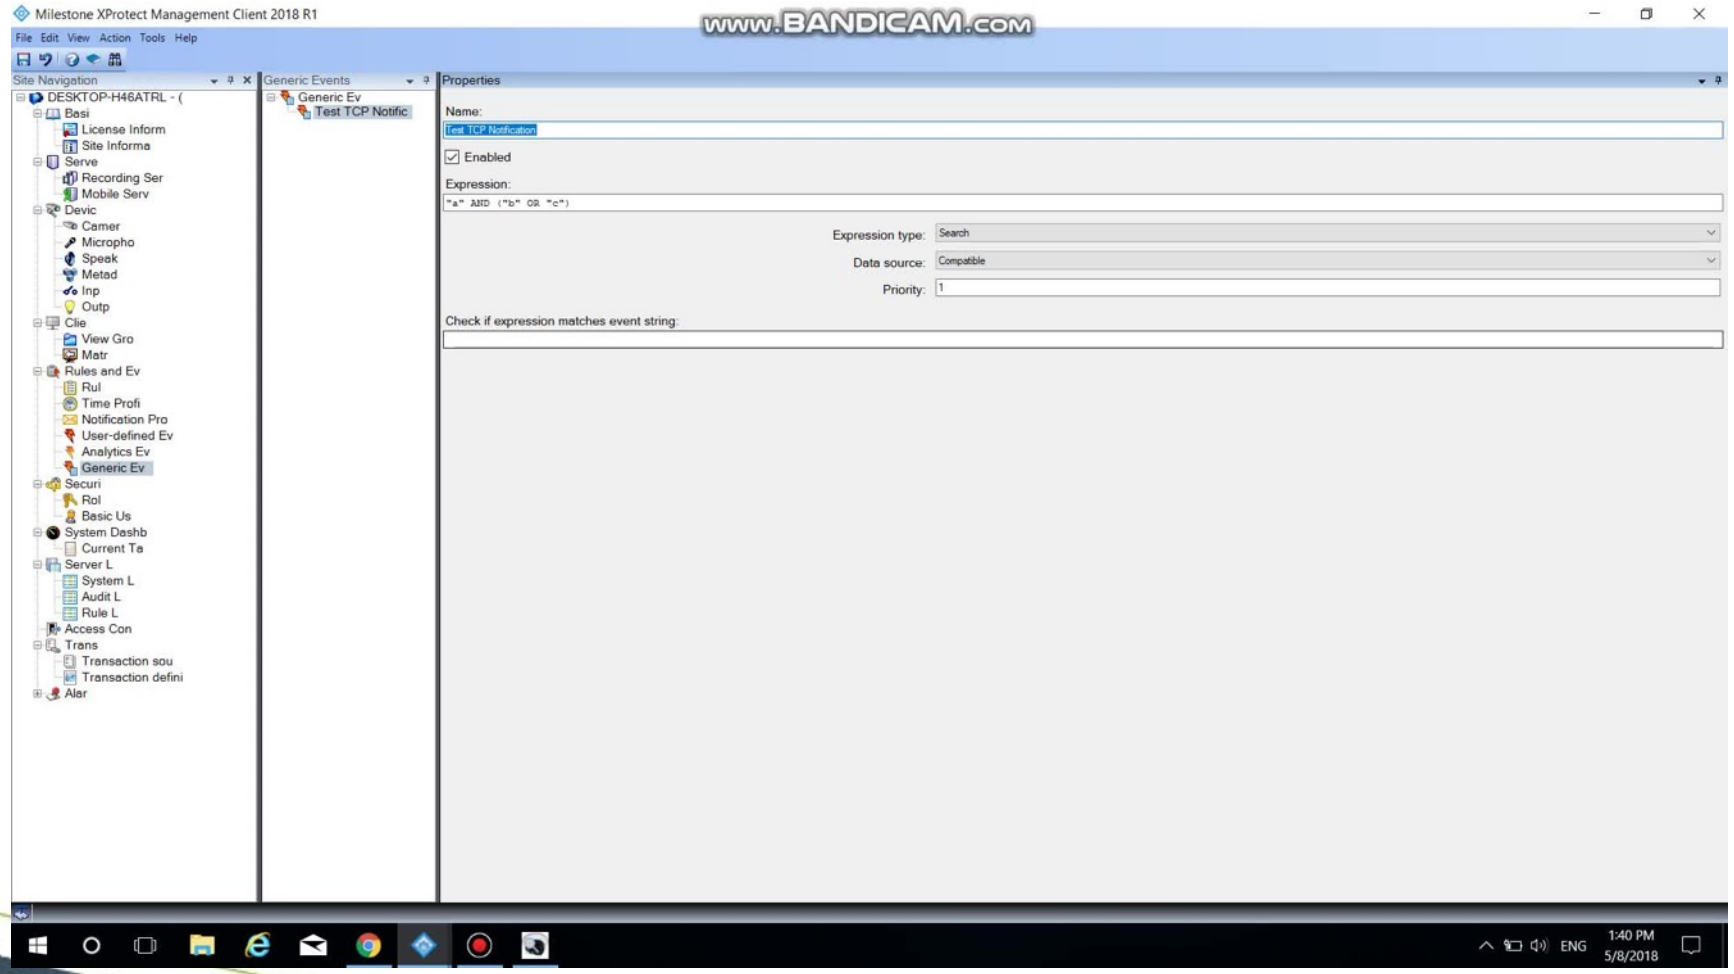

www.diviotec.com

Milestone

Open port and allowed ip address

To access the menu tools, select option

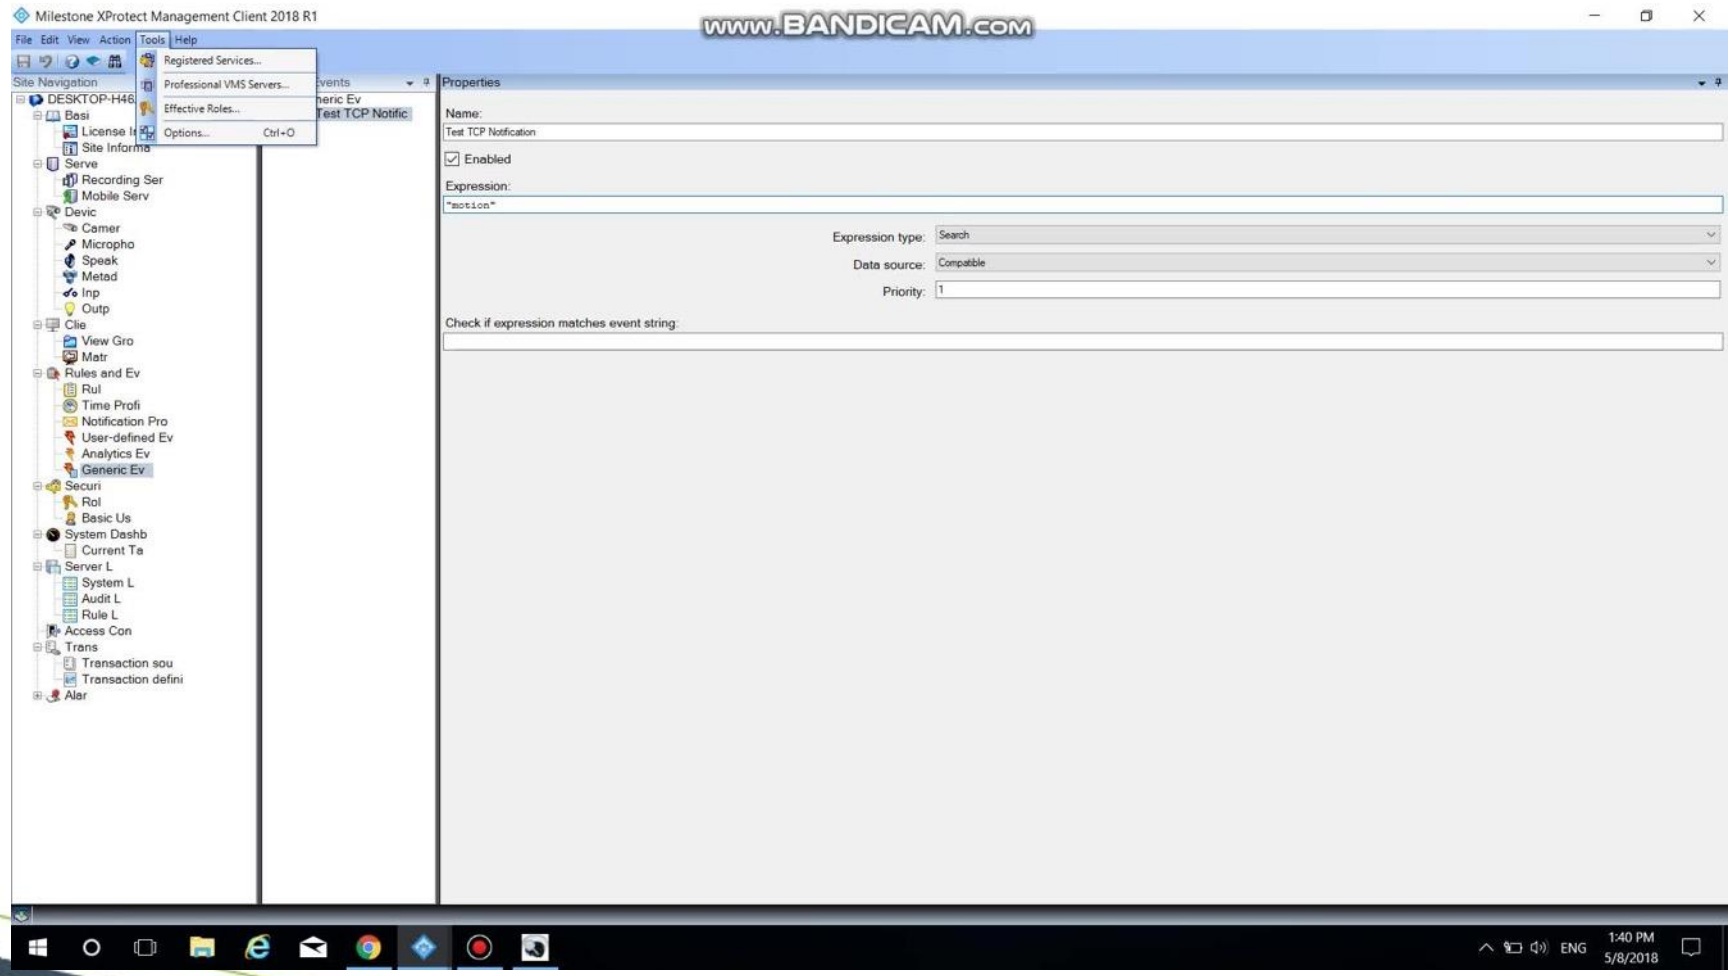

To access the Tab Generic event

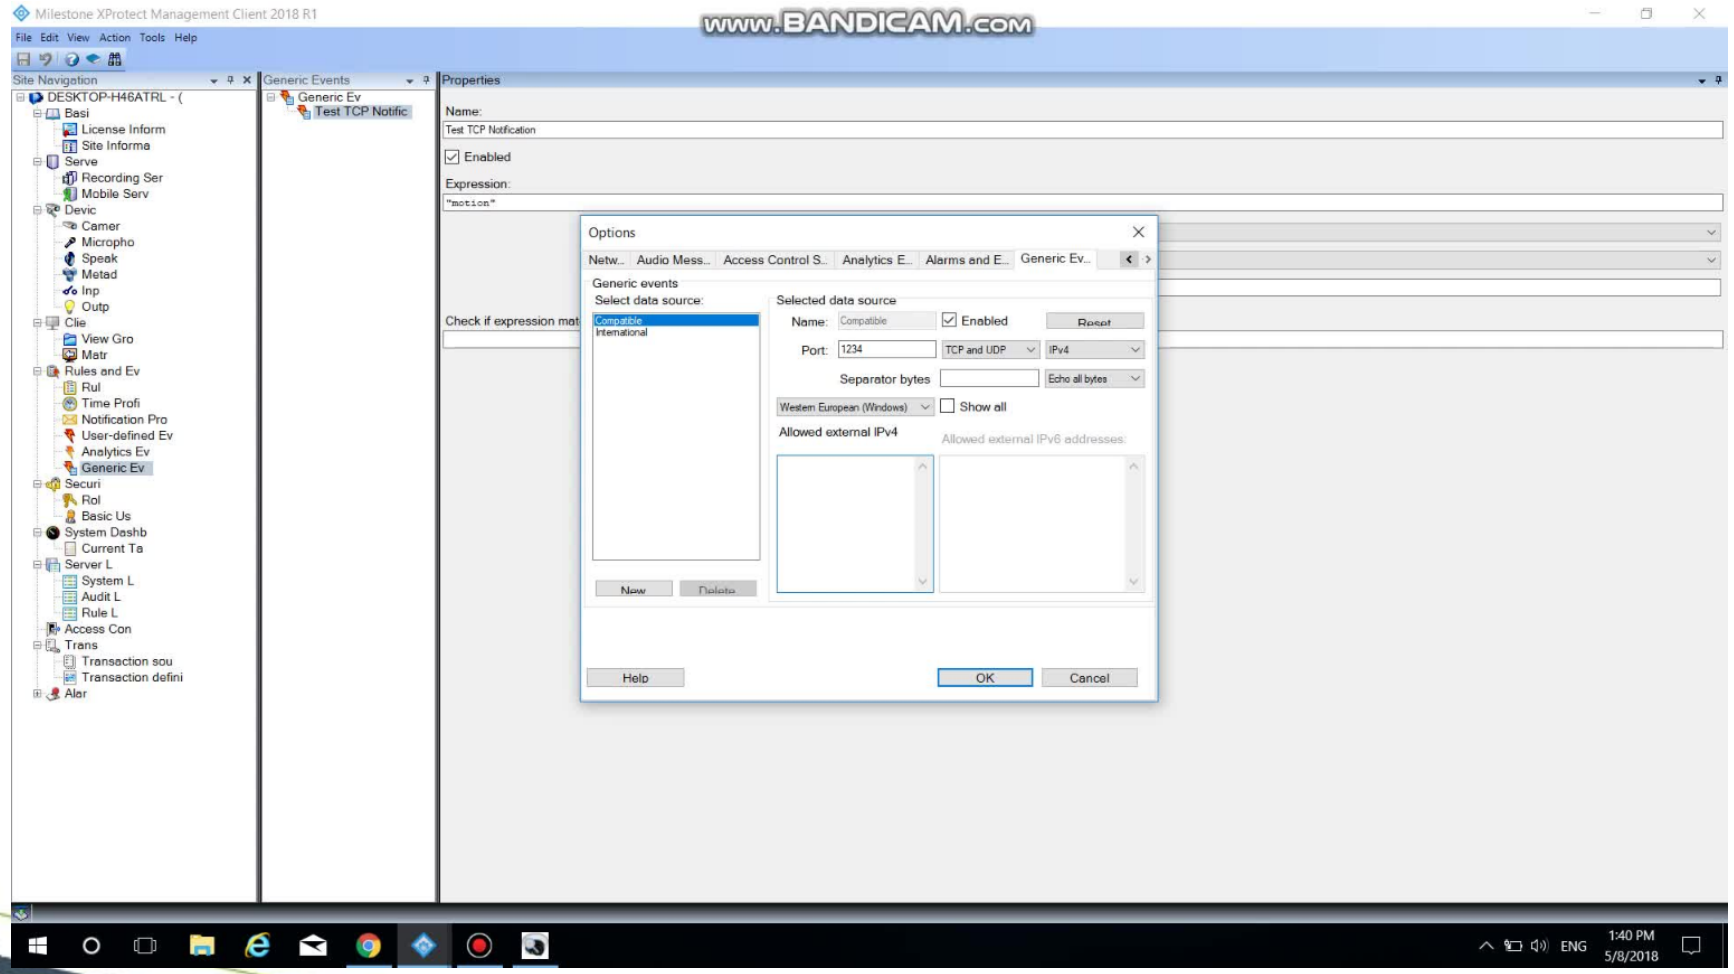

Set port and Allowed External IP and enable

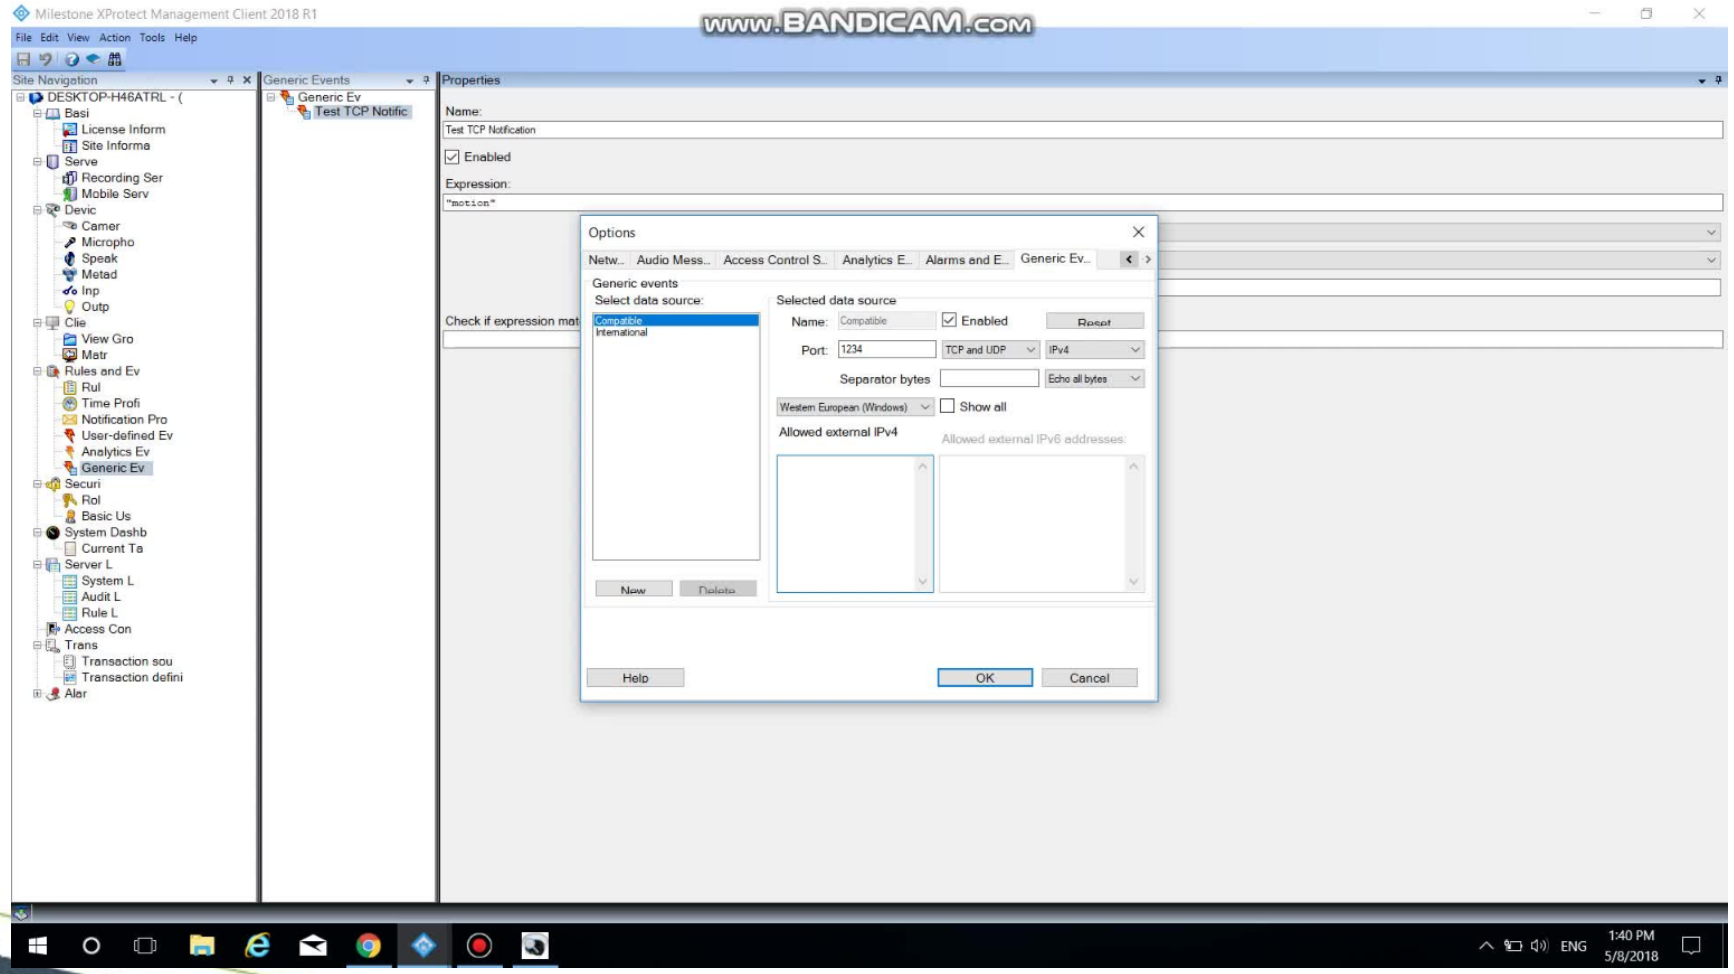

www.diviotec.com

Setup Camera Settings

Motion detection for example:

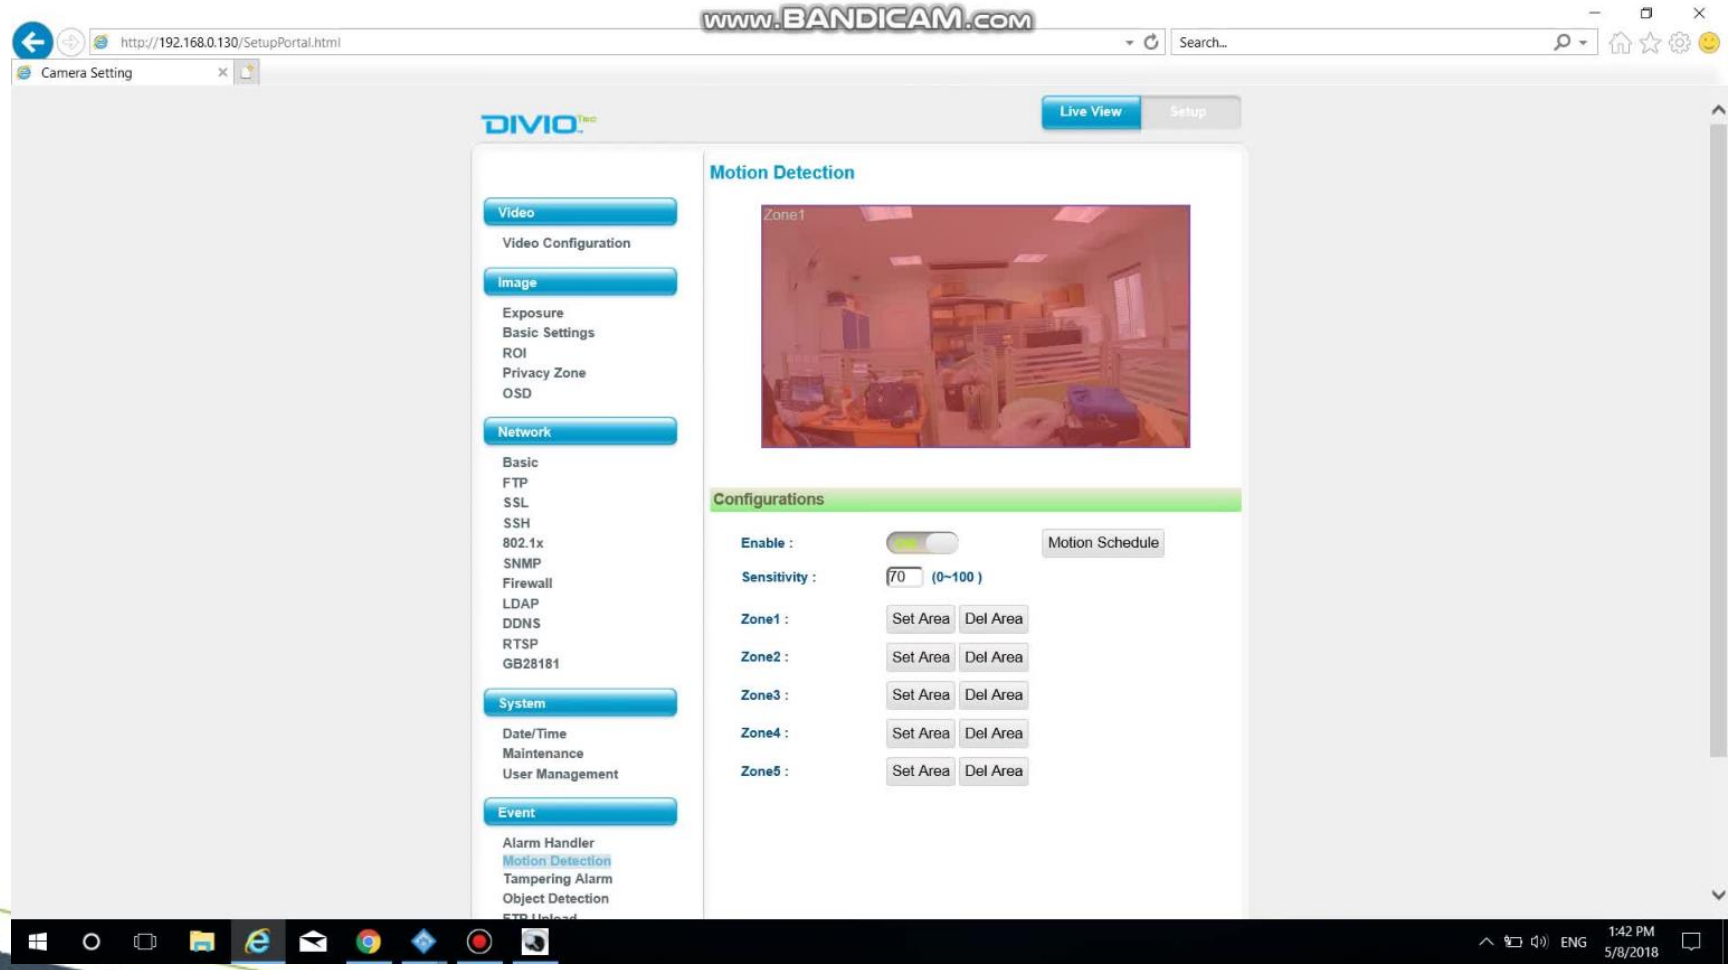

Setup TCP Notify:

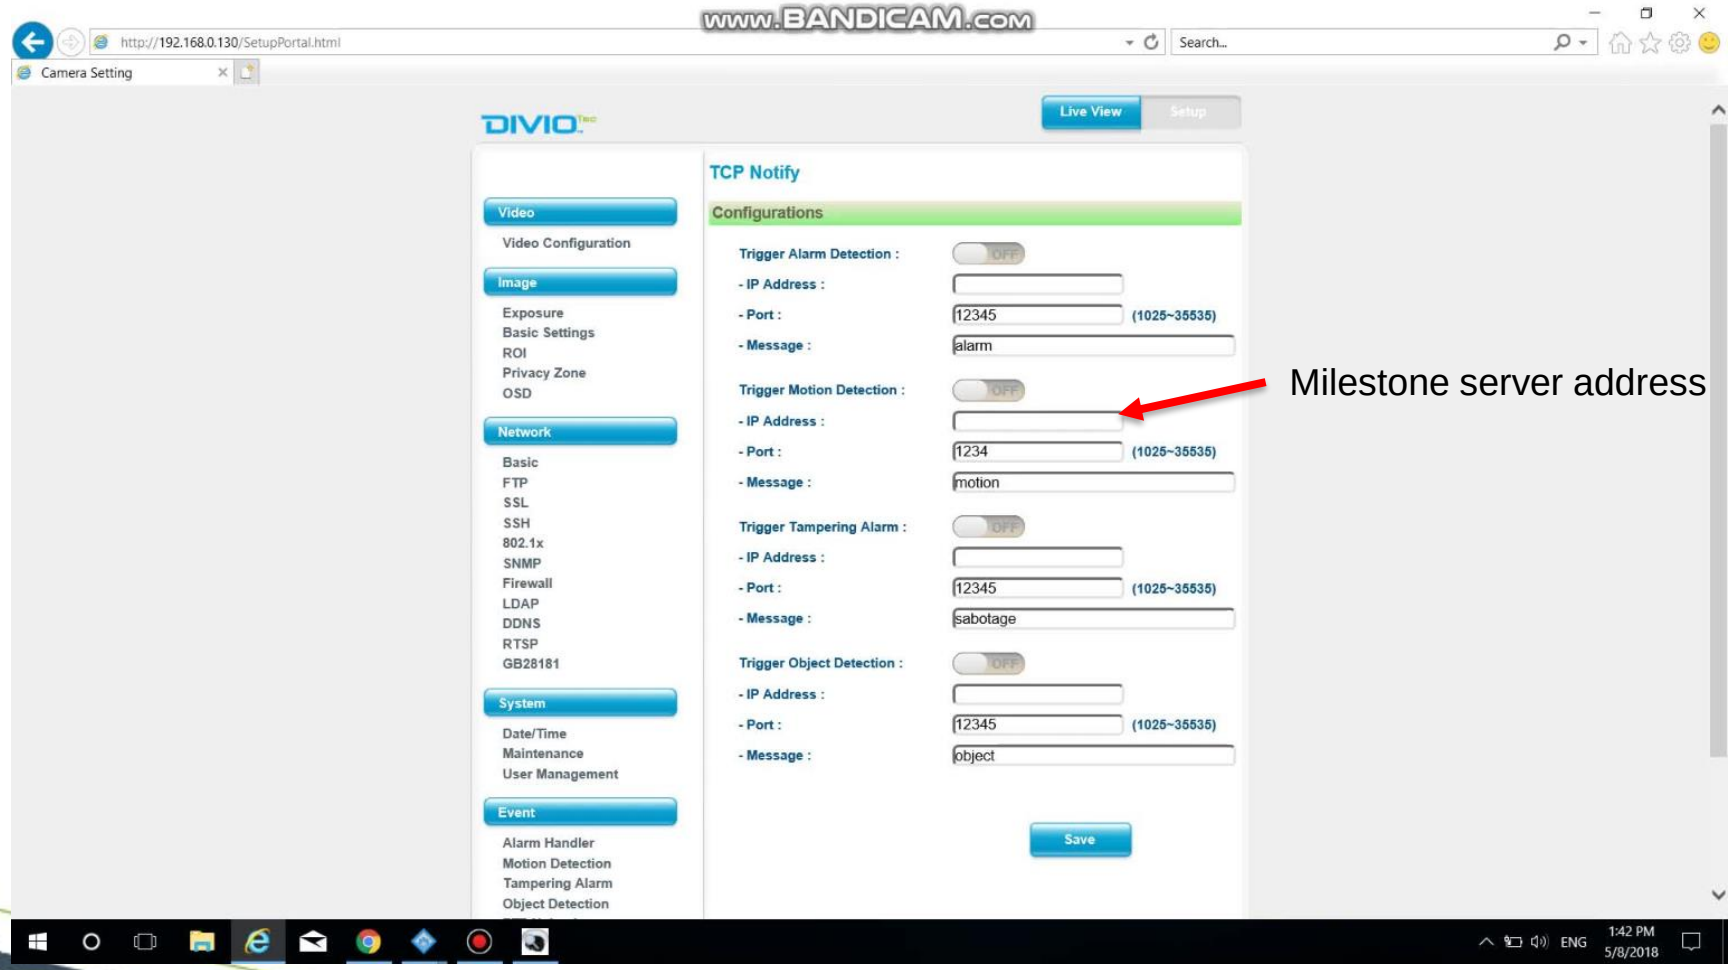

DIVIO Tec ™

How to check event?

Monitor TCP Notification in Generic Event

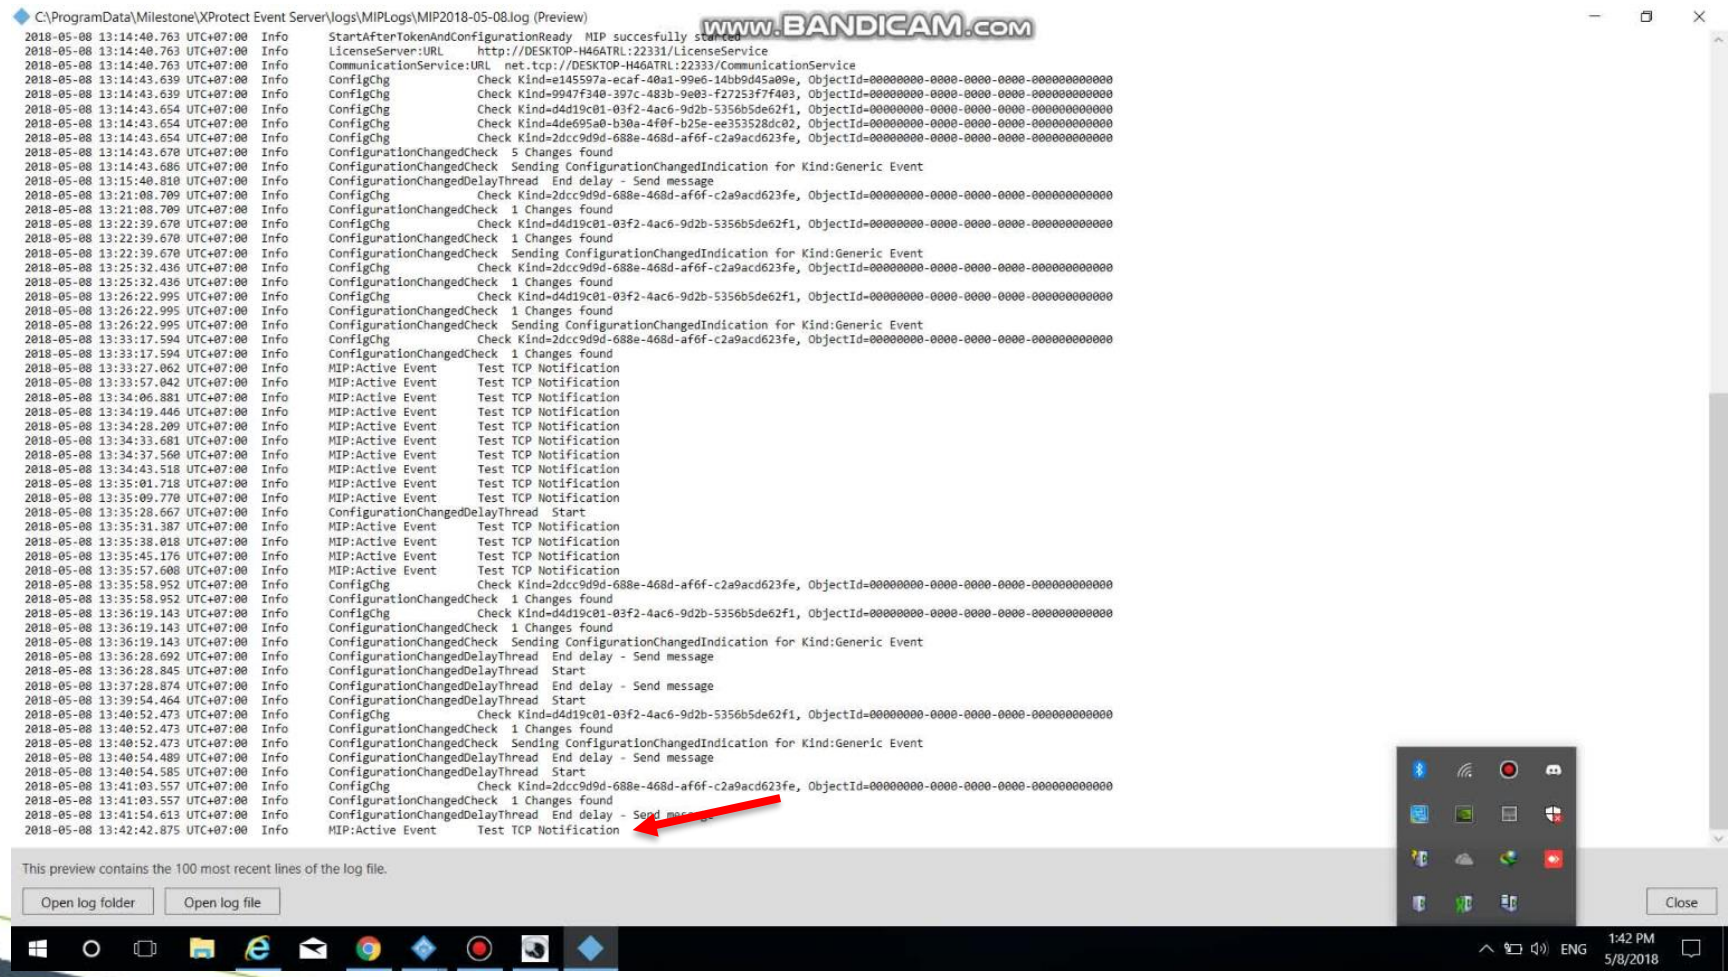

DIVIO Tec ™

Generate Rules to Trigger (if need)

Setup a rule for TCP Notification

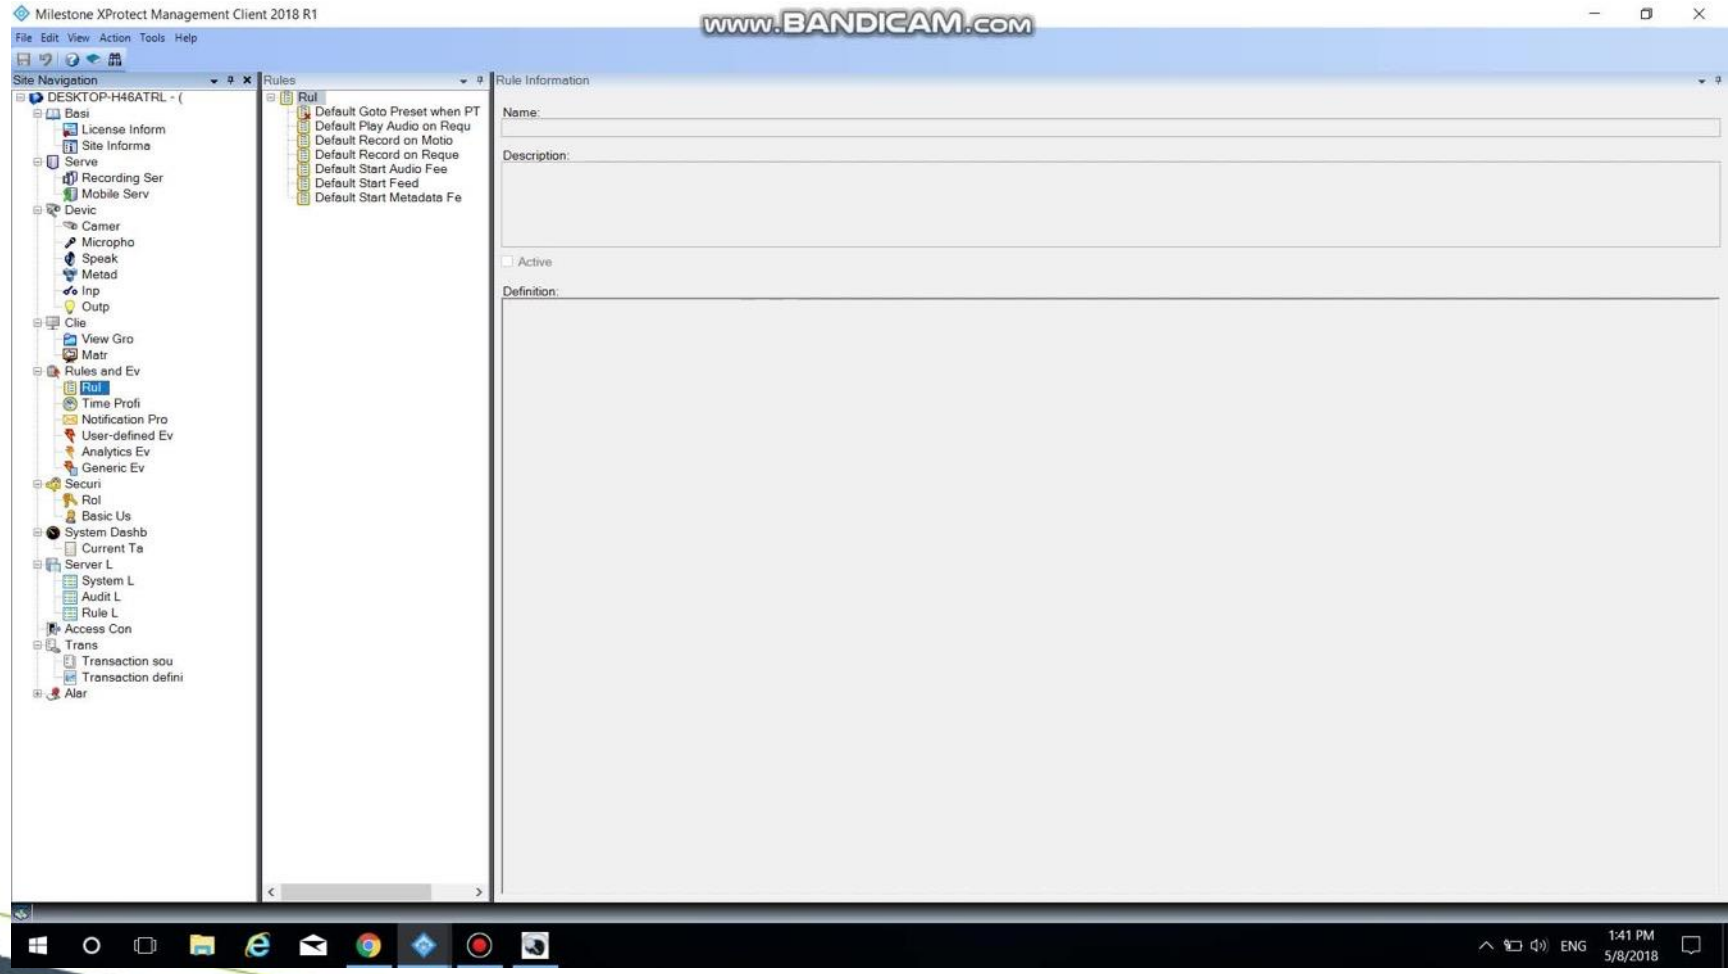

Choose "perform an action on"

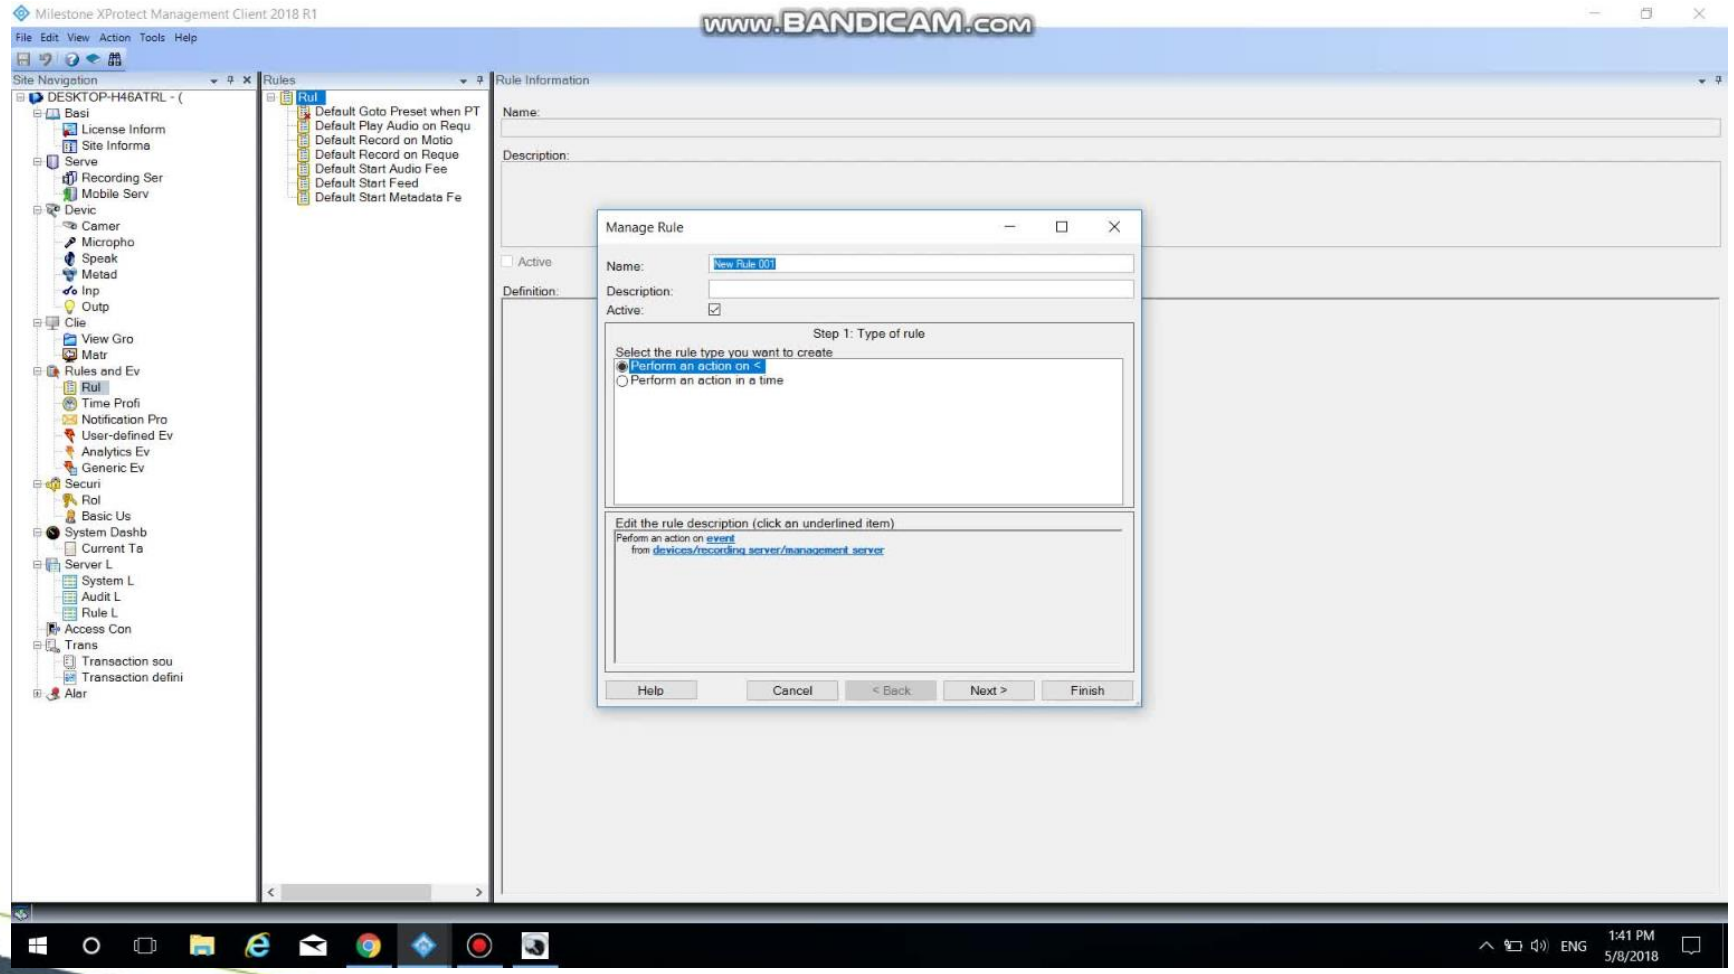

Select "Event" -> "Generic event"

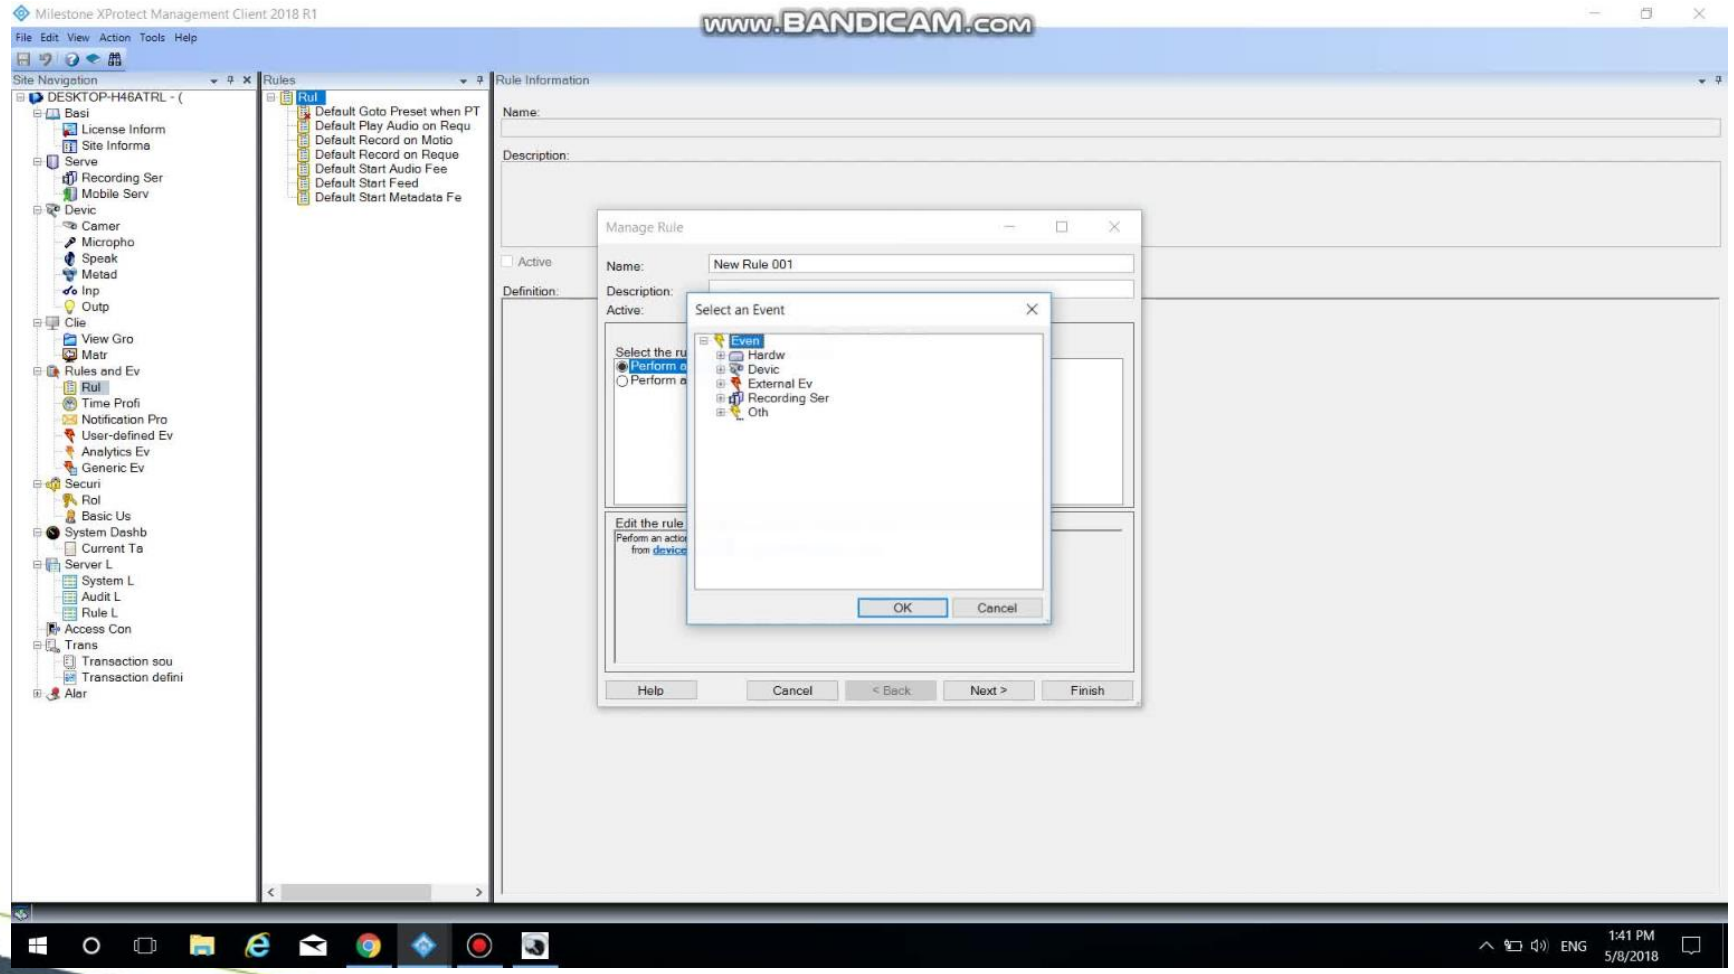

Select " Day of week"

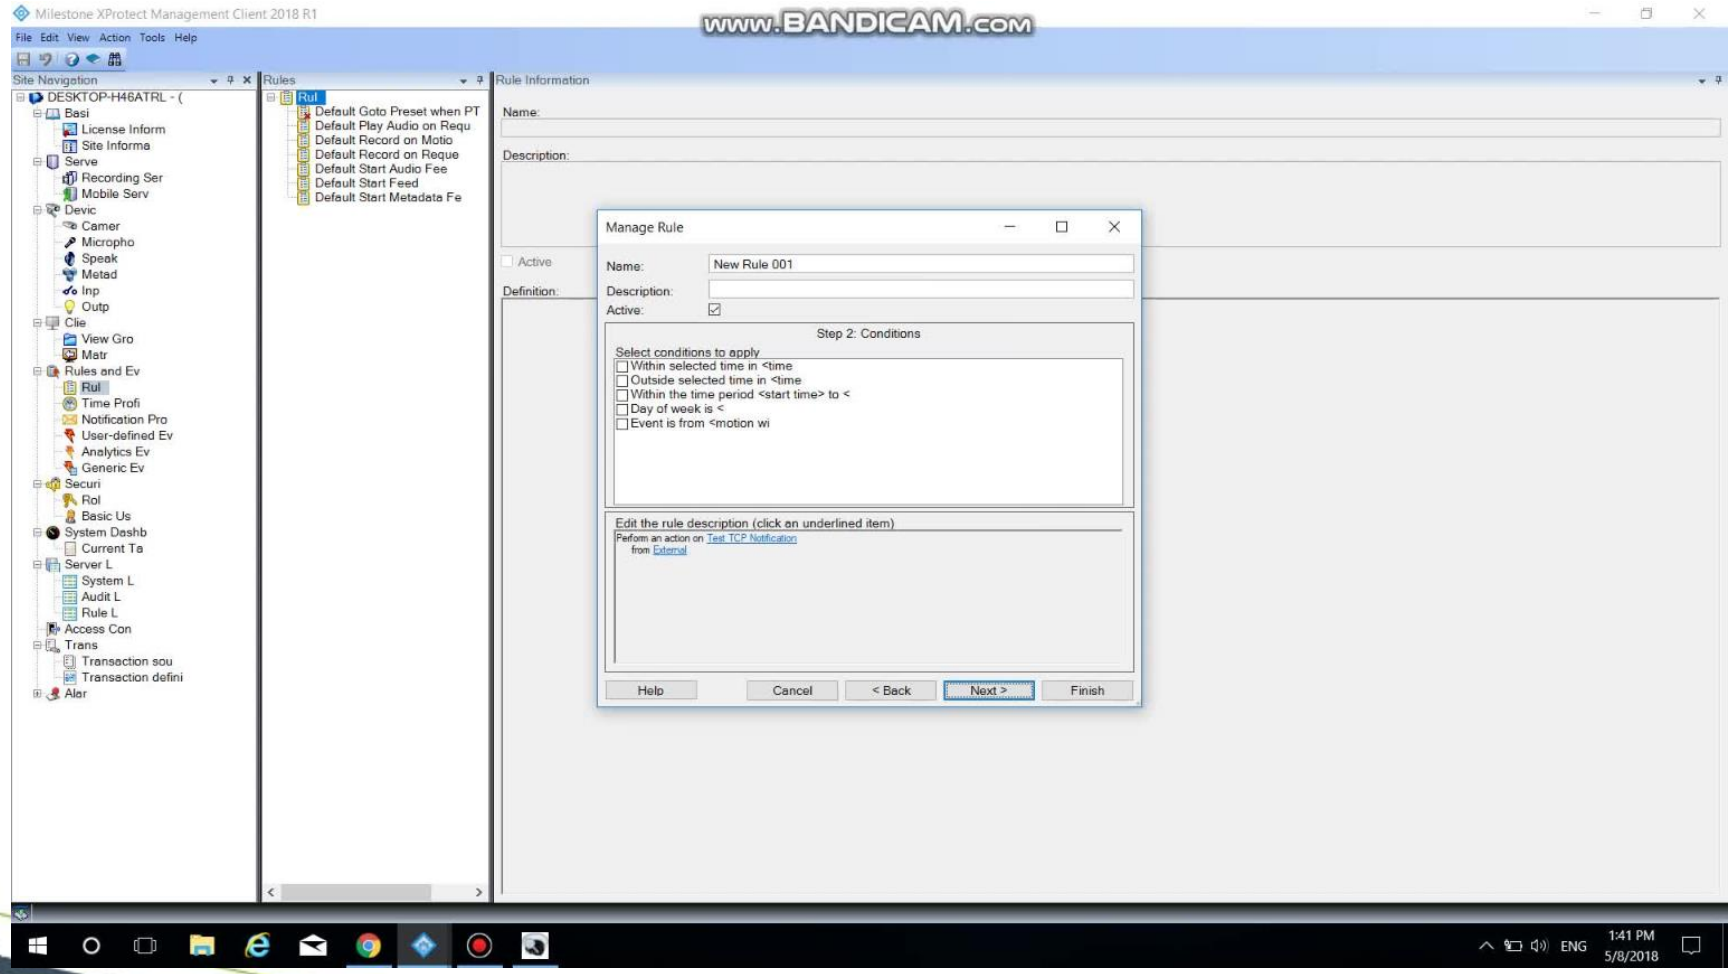

Select "Start Record on Device"

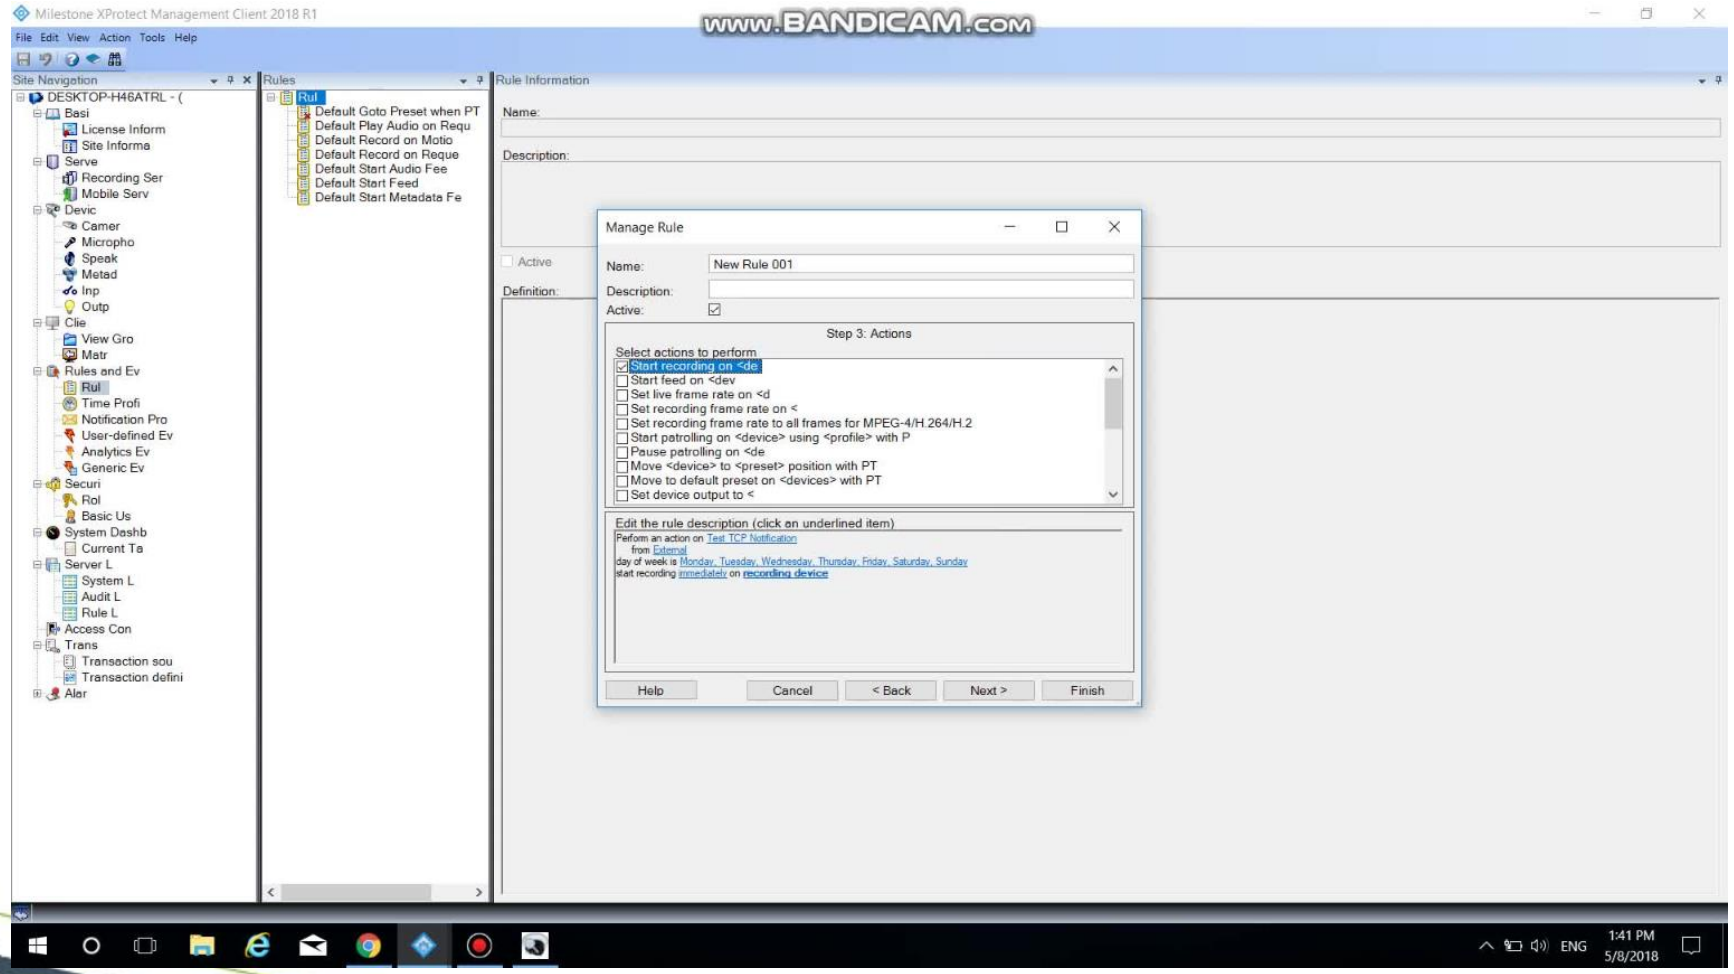

"Select device"

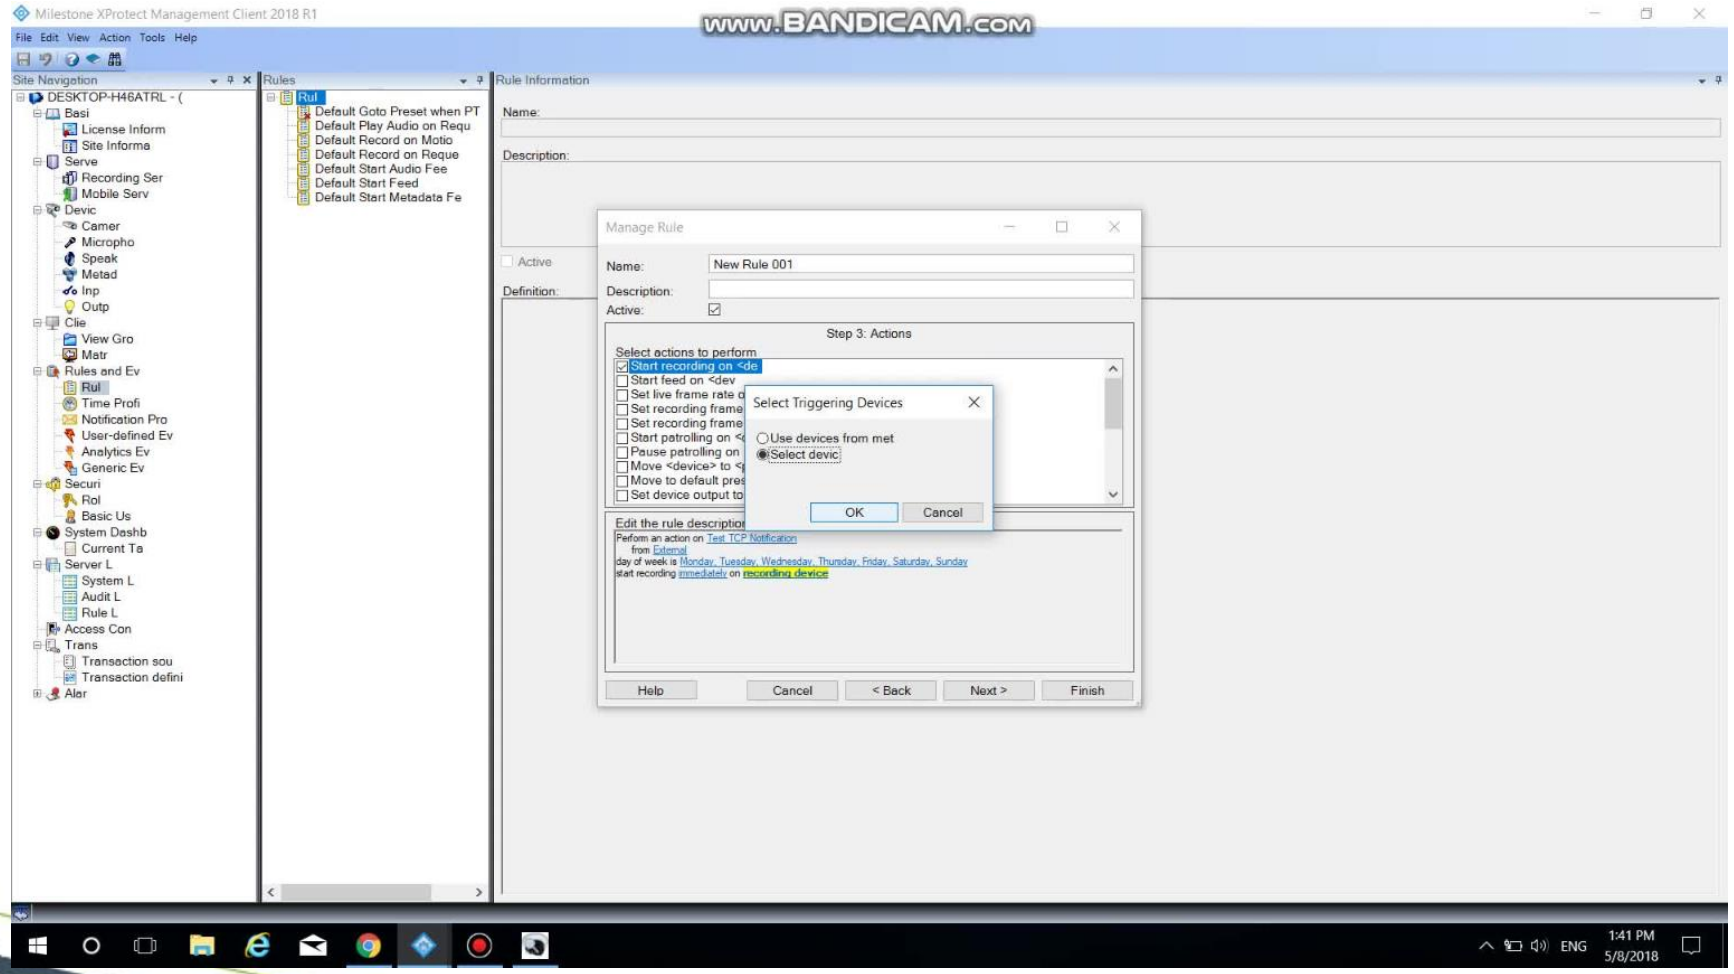

Select "Perform stop action after"

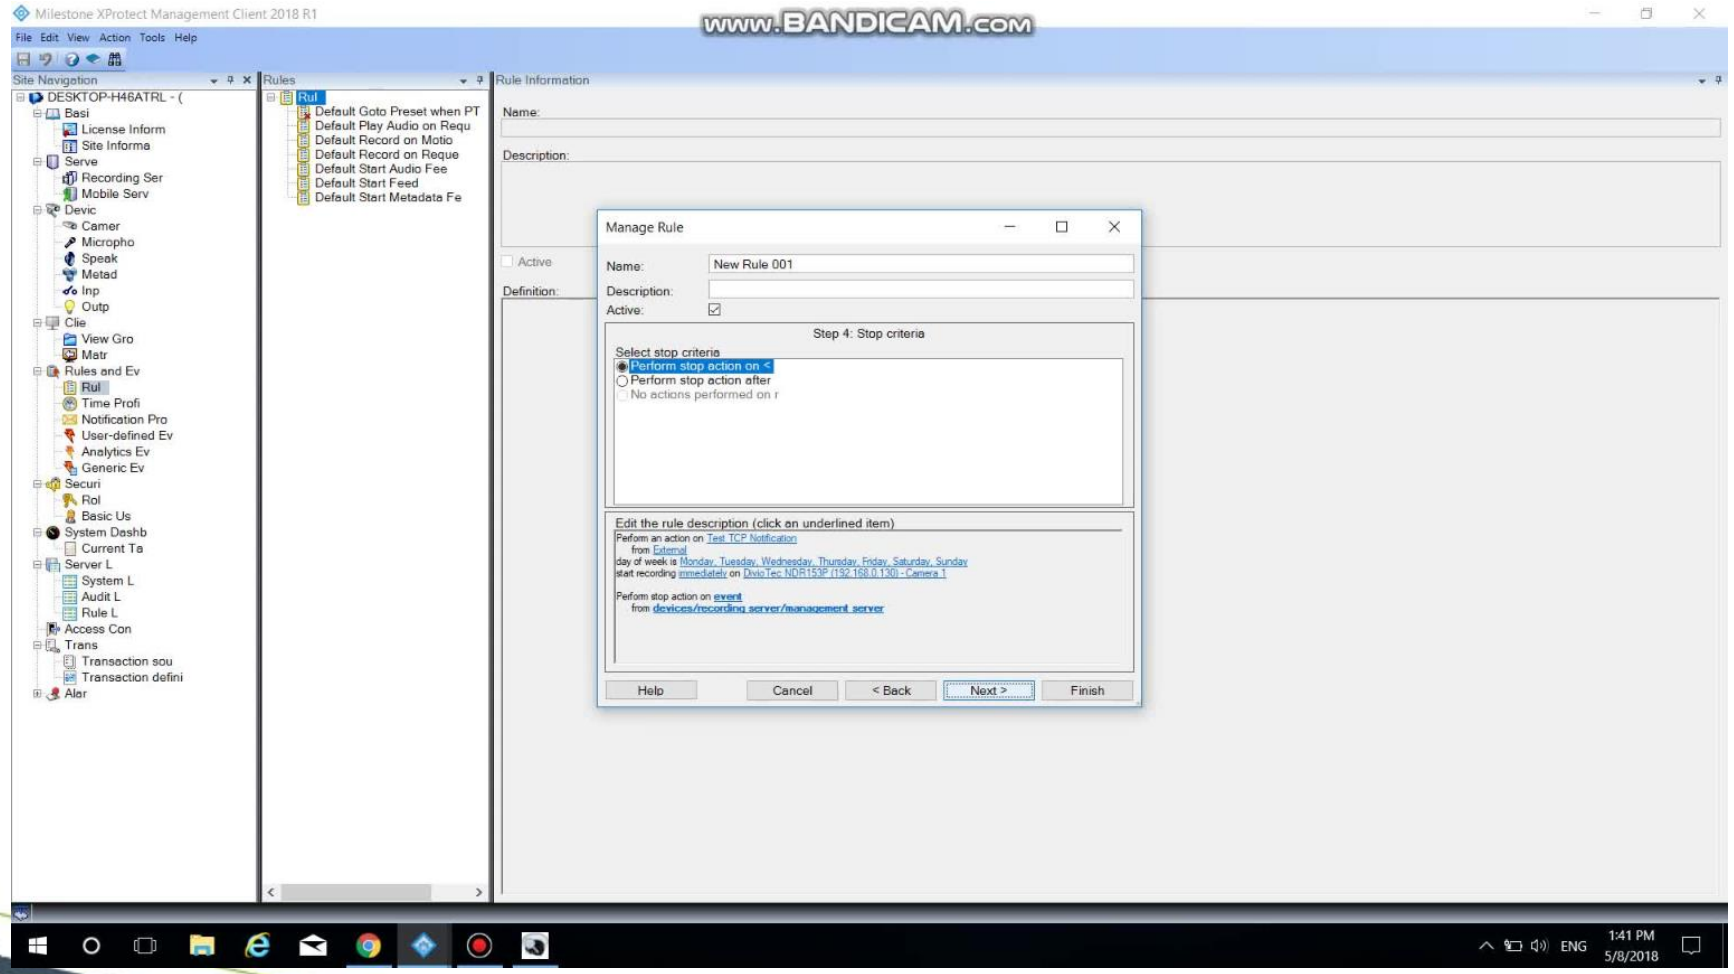

Set time stop Record after have Event

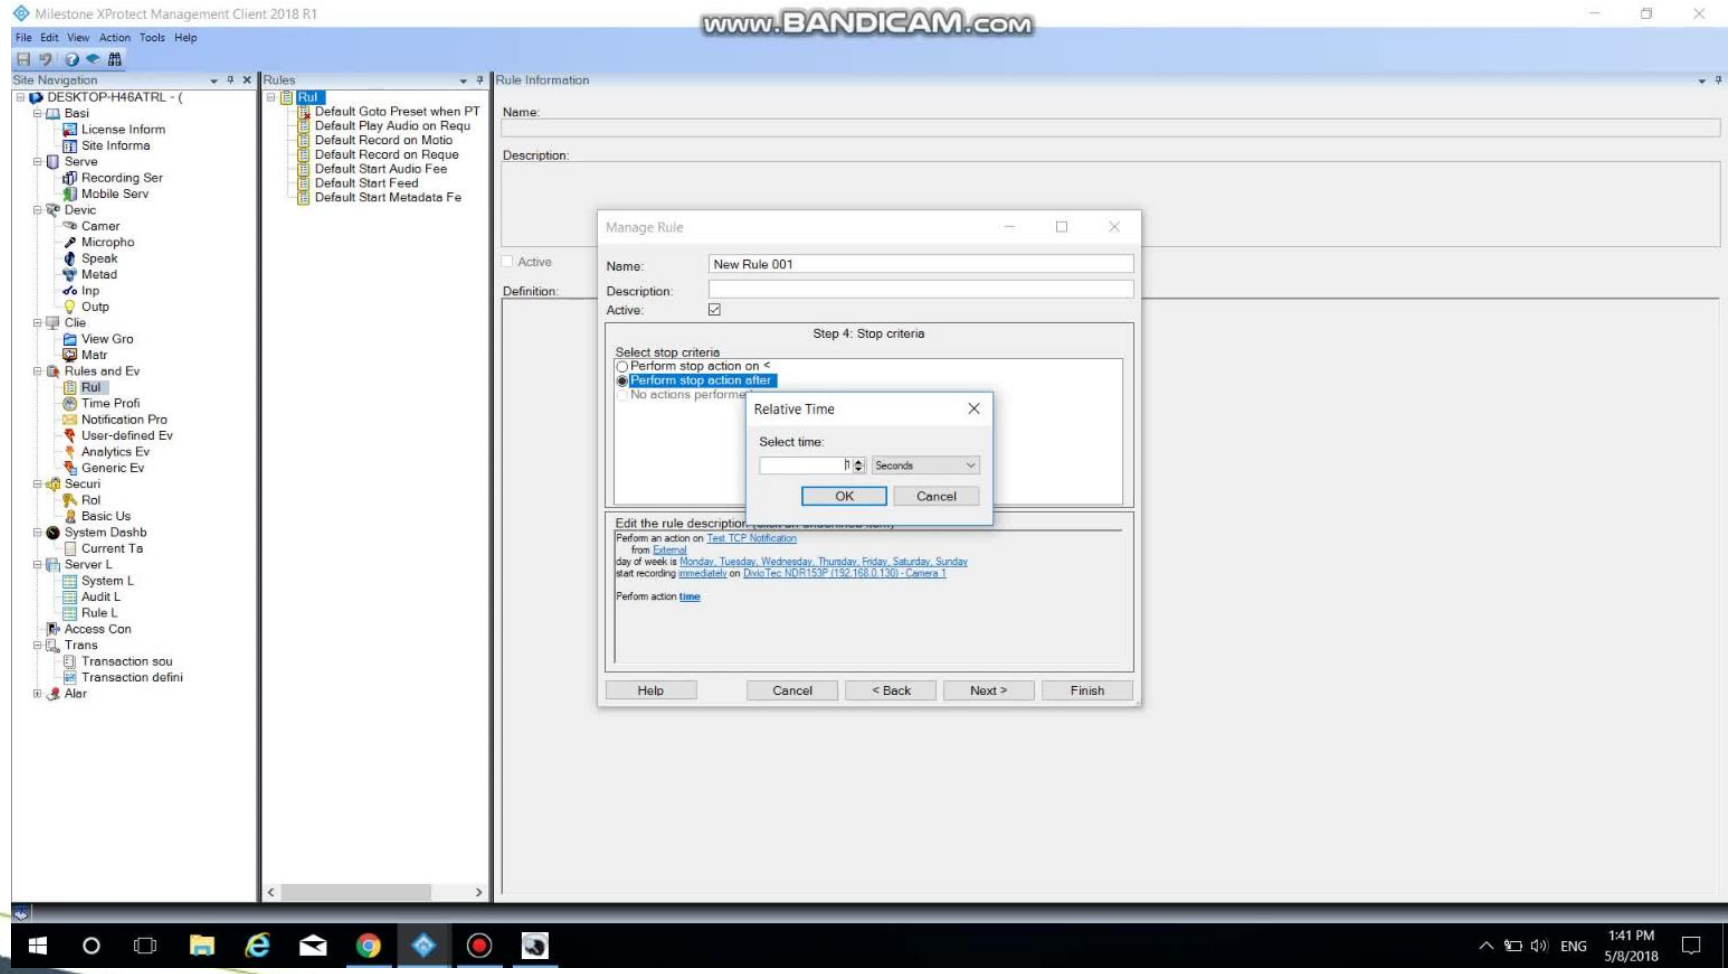

Select "Finish"

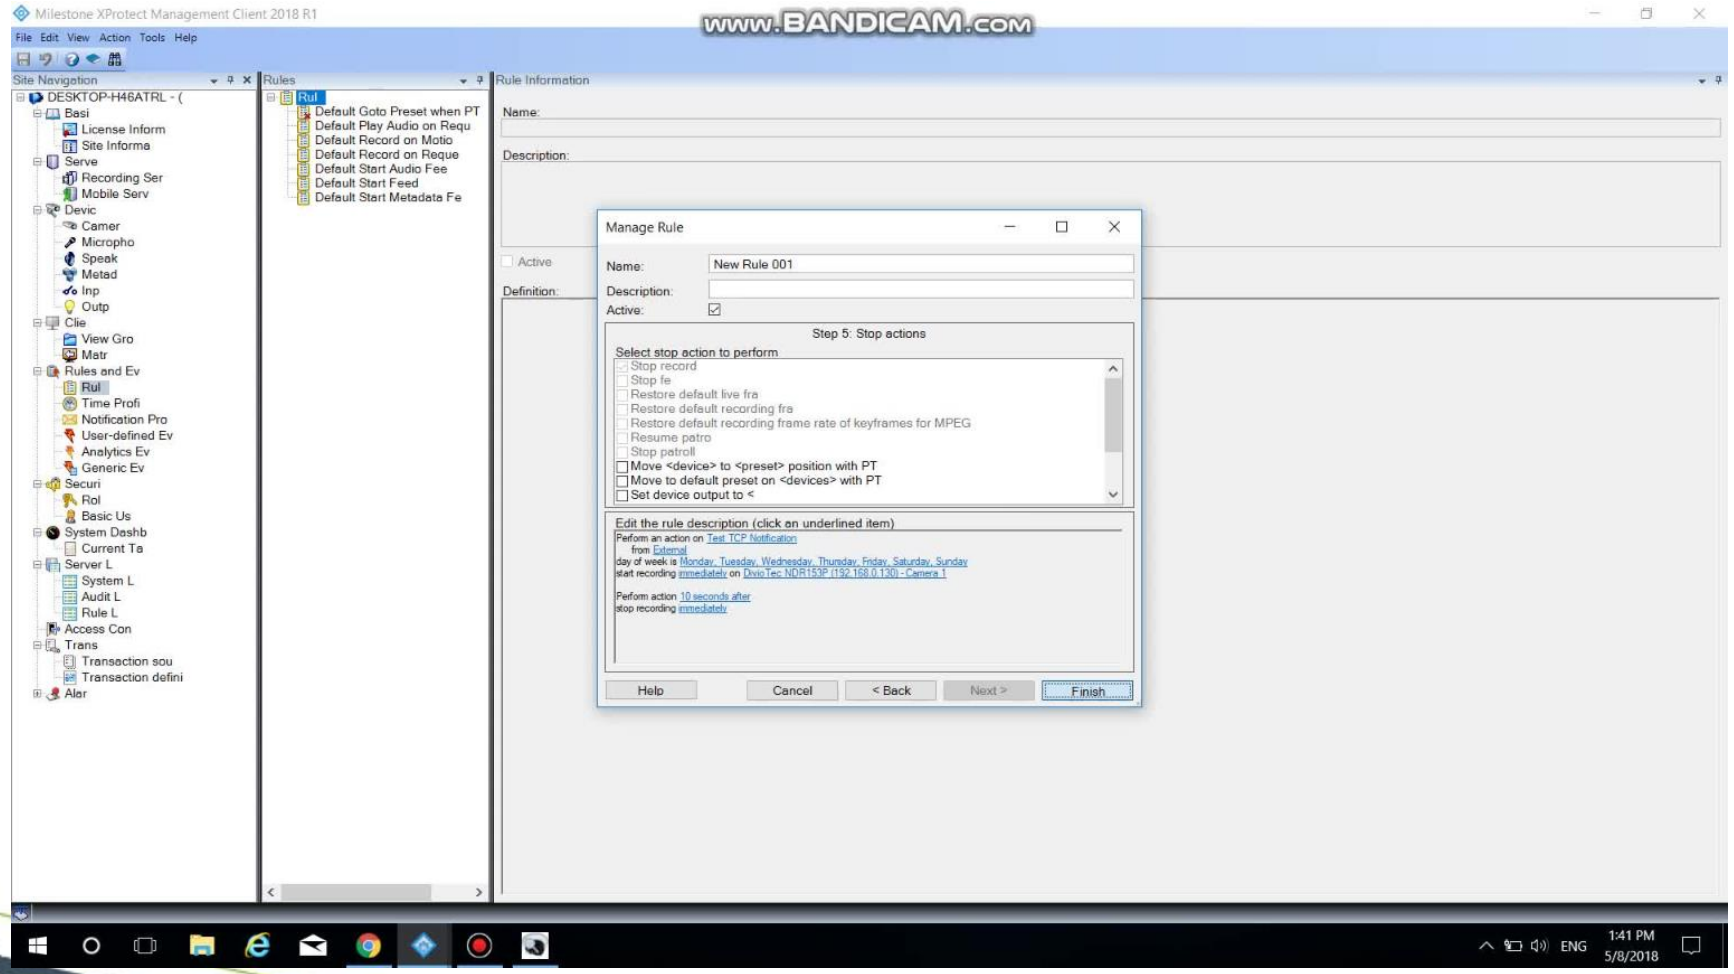

DIVIO Tec ™

At Diviotec, our experience is your protection